



Notes:

1. S1-1~S1-5: Band switch in "0.5~1.6MHz" Position.
2. S2-1, S2-2: Matching switch in "DIRECT" Position.
3. S3: Antenna switch in "UNBALANCED" Position.

RD-9820