

Service Manual

Radio

10-BAND
COMMUNICATION RECEIVER

RF-4900/©

WARNING

This service literature is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service literature by anyone else could result in serious injury or death.



SPECIFICATIONS

Frequency Range:	FM	88~108 MHz
	MW	525~1605 kHz (571~187m)
	SW ₁	1.6~3 MHz (187~100m)
	SW ₂	3~7 MHz (100~42.9m)
	SW ₃	7~11 MHz (42.9~27.3m)
	SW ₄	11~15 MHz (27.3~20m)
	SW ₅	15~19 MHz (20~15.8m)
	SW ₆	19~23 MHz (15.8~13m)
Intermediate Frequency:	SW ₇	22~26 MHz (13.6~11.5m)
	SW ₈	26~30 MHz (11.5~10m)
	FM	10.7 MHz
	MW/SW ₁	455 kHz
Sensitivity:	SW ₂ ~ ₈	1st IF 2 MHz 2nd IF 455 kHz
	FM	3 μ V (S/N 26 dB)
	MW	60 μ V/m (S/N 10 dB)
	SW ₁	1 μ V (S/N 10 dB)
	SW ₂	1.3 μ V (S/N 10 dB)
	SW ₃	0.8 μ V (S/N 10 dB)
	SW ₄	1.8 μ V (S/N 10 dB)
	SW ₅	1.2 μ V (S/N 10 dB)
	SW ₆	1.2 μ V (S/N 10 dB)
	SW ₇	1.3 μ V (S/N 10 dB)
	SW ₈	1.3 μ V (S/N 10 dB)

Power Source:	AC 120V 60 Hz
	or 12V (Eight "D" Size Flash-light Batteries) (Panasonic UM-1 or equivalent)
Power Consumption:	10W (AC Only)
Speaker:	10 cm (4") PM Dynamic Speaker
Dimensions:	18 $\frac{3}{4}$ " (Wide) $\times$ 7 $\frac{1}{2}$ " (High) $\times$ 13 $\frac{3}{4}$ " (Deep) (482 $\times$ 200 $\times$ 354 mm)
	8 kg (17 lb 10 oz) without batteries
Weight:	Speaker4 Ω
Impedance:	AUX Jack300k Ω (20mV)
	REC OUT Jack4k Ω (400mV)
	Earphone Jack4~8 Ω
	FM EXT ANT300 Ω
	SW ₁ /MW75 Ω
	SW ₂ ~ ₈75 Ω

Weights and dimensions shown are approximate.
(Les poids et dimensions mentionnés sont approximatifs.)
Specifications are subject to change without notice for further improvement.

Panasonic®

Panasonic Company
Division of Matsushita Electric
Corporation of America

Panasonic Hawaii, Inc.
320 Waiakamilo Road, Honolulu, Hawaii 96817

Matsushita Electric of Canada Ltd.
5770 Ambler Drive, Mississauga,
Ontario, L4W 2K9

DISASSEMBLY INSTRUCTIONS

■ TO REMOVE CABINET COVER

1. Remove the four (4) covers for the handle in the direction of arrow, as shown in fig. 1.
2. Remove the five (5) screws (nos. 1~5) for the handle and cabinet cover, as shown in fig. 2.
3. Remove the five (5) screws (nos. 1~5) for the handle and cabinet cover, as shown in fig. 3.
4. Remove the eight (8) screws (nos. 1~8) for the cabinet cover, as shown in fig. 4.
5. Remove the nine (9) screws (nos. 1~9) for the cabinet cover, as shown in fig. 5.
6. Remove the cabinet cover.
7. To reassemble, reverse the above procedure.

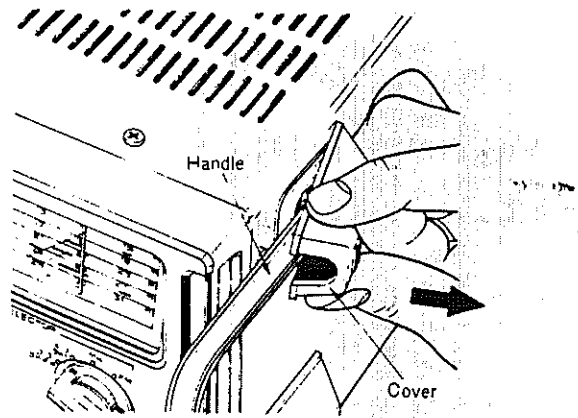


Fig. 1

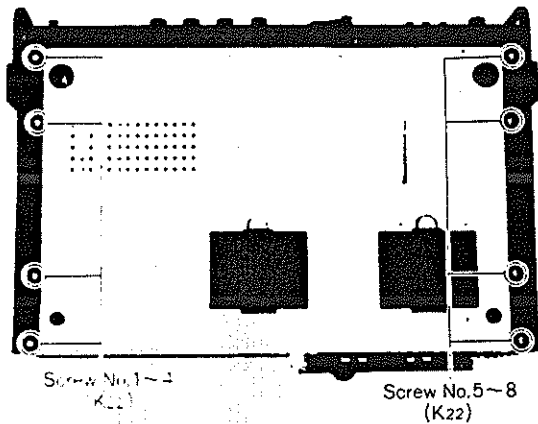


Fig. 4

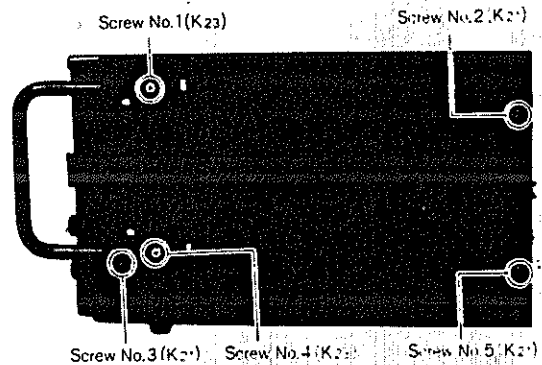


Fig. 2

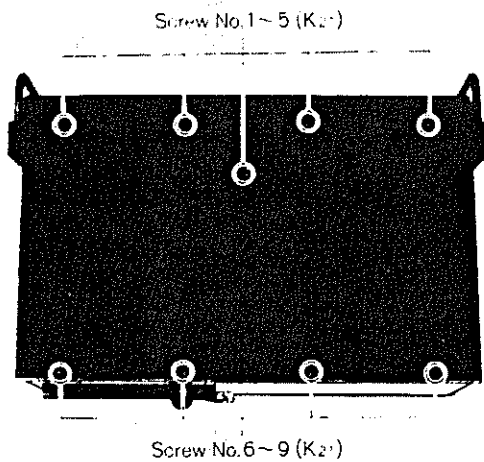


Fig. 5

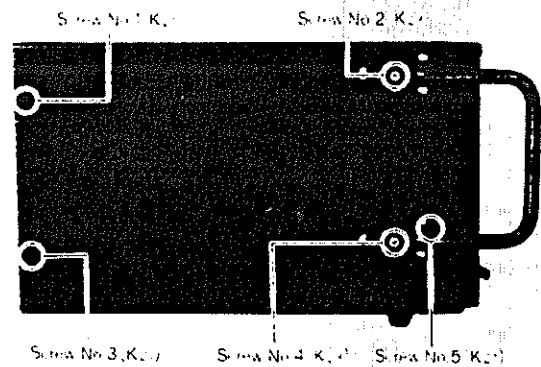


Fig. 3

■ TO REMOVE BOTTOM COVER

1. Remove the cabinet cover. (Refer to cabinet cover removal instruction.)
2. Remove the eight (8) screws (nos. 1~8) for the bottom cover as shown in fig. 6.
3. Remove the bottom cover.
4. Remove the socket from power source PC board.
5. To reassemble, reverse the above procedure.

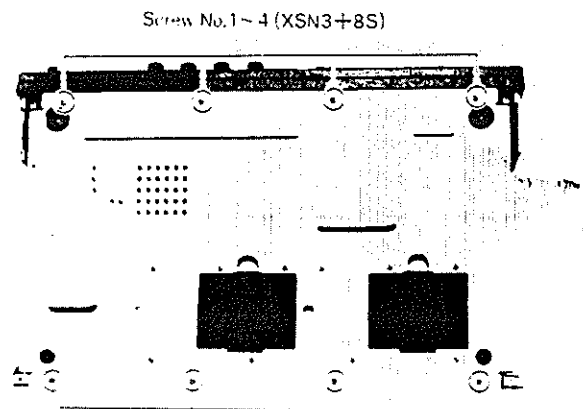


Fig. 6

■ TO REMOVE FREQUENCY COUNTER

1. Remove the cabinet cover. (Refer to cabinet cover removal instruction.)
2. Remove the socket from PC board.
3. Remove the three (3) screws (nos. 1~3) for the frequency counter, as shown in fig. 7-1.
4. Remove the two (2) sockets (nos. 1 & 2) for the frequency counter, as shown in fig. 7-2.
5. Remove the frequency counter.
6. To reassemble, reverse the above procedure.

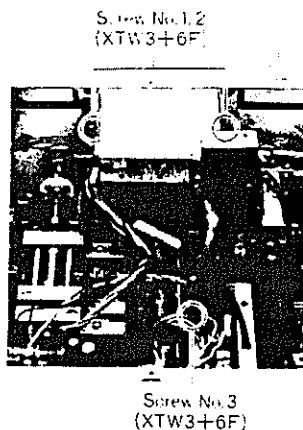


Fig. 7-1

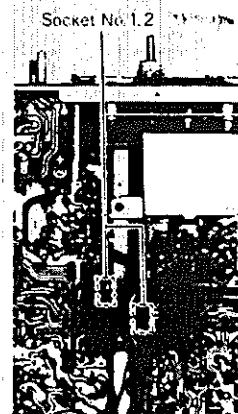


Fig. 7-2

■ TO REMOVE PC BOARD (Frequency Counter)

1. Remove the frequency counter.
2. Remove the three (3) screws (nos. 1~3) for the shield cover, as shown in fig. 8.
3. Remove the two (2) screws (nos. 1 & 2) for the PC board, as shown in fig. 9.
4. Remove the PC board.
5. To reassemble, reverse the above procedure.

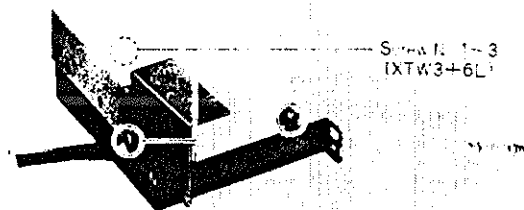


Fig. 8

■ TO REMOVE PC BOARD (VFO Circuit)

1. Remove the bottom cover. (Refer to bottom cover removal instruction.)
2. Loosen the two (2) screws (nos. 1 & 2) for the tuning capacitor shaft, as shown in fig. 10.
3. Remove the one (1) screw for the PC board, as shown in fig. 11.
4. Remove the three (3) screws (nos. 1~3) for the PC board, as shown in fig. 12.
5. To remove PC board completely unsolder lead wires from the other PC board.
6. To reassemble, reverse the above procedure and read the following notes.

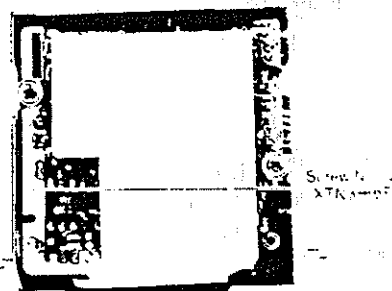


Fig. 9

Notes:

1. Set tuning capacitor to maximum capacity.
2. Turn tuning shaft fully counter-clockwise.

■ TO REMOVE FERRITE ANTENNA

1. Remove the bottom cover. (Refer to the bottom cover removal instruction.)
2. Unsolder lead wires from PC board.
3. Push the catches in the direction of arrows, as shown in fig. 13 and remove the holder.
4. Push the holder in the direction of arrows ① and ② and open the holder in the direction of arrow ③ and ④, as shown in fig. 14.
5. Remove the ferrite antenna.
6. To reassemble, reverse the above procedure and read the following note.

Note:

1. Insert the lead wires in the slit of holder, as shown in fig. 15.

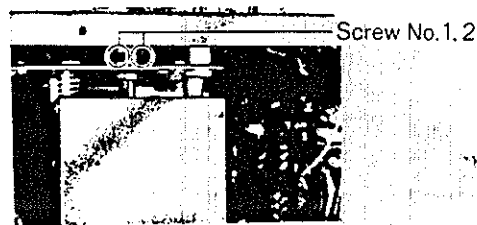


Fig. 10

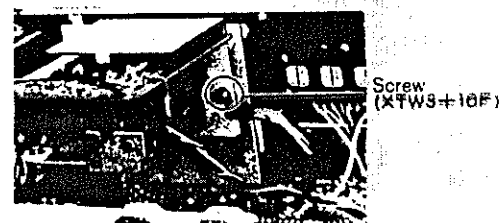


Fig. 11

■ TO REMOVE FRONT PANEL

1. Remove the bottom cover. (Refer to the bottom cover removal instruction.)
2. Pull out sockets from speaker.
3. Pull out socket from PC board.
4. Remove the eleven (11) knobs.
5. Remove the three (3) red screws (nos. 1~3) for the front panel, as shown in fig. 16.
6. Remove the three (3) red screws (nos. 1~3) for the front panel, as shown in fig. 17.
7. To reassemble, reverse the above procedure.

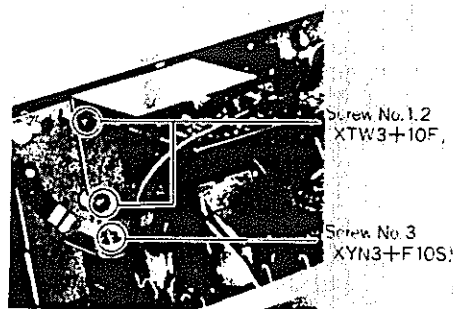


Fig. 12

■ TO REMOVE BAND SWITCH SHAFT (SW₂ ~ 8, SW₁, MW, FM)

1. Remove the front panel. (Refer to the front panel removal instruction.)
2. Set band switch to "SW₂ ~ 8" position.
3. Remove the switch wire in the direction of arrow, as shown in fig. 18.
4. Remove the one (1) nut for the switch shaft, as shown in fig. 19.
5. To reassemble, reverse the above procedure and read the following note.

Note:

1. Turn switch shaft fully counter-clockwise.

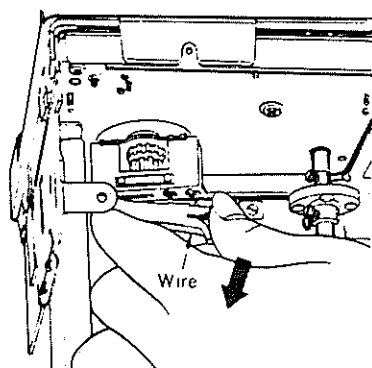


Fig. 18

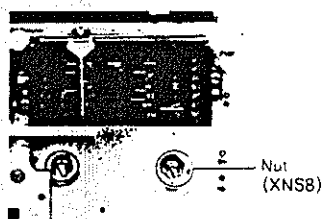


Fig. 19

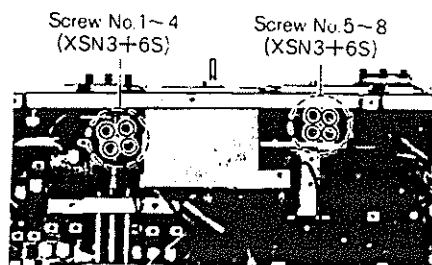


Fig. 20

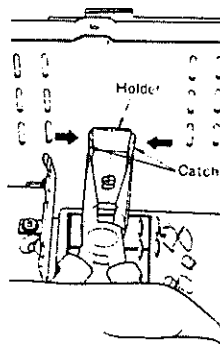


Fig. 13

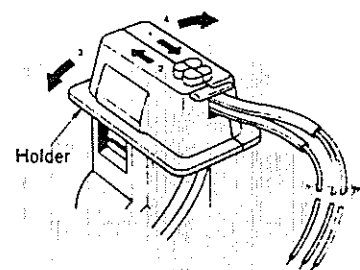


Fig. 14

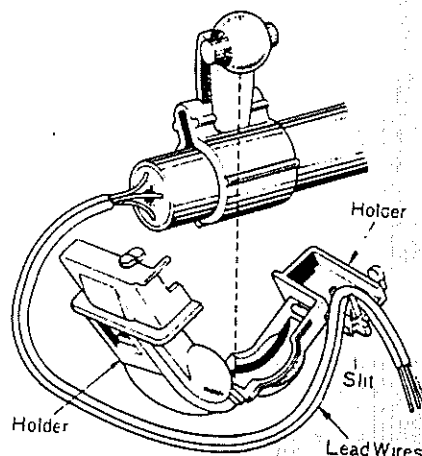


Fig. 15

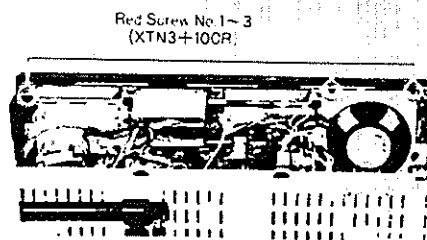


Fig. 16

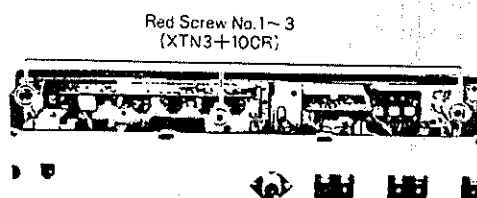


Fig. 17

■ TO REMOVE BAND SWITCH SHAFT (SW₂ ~ 8)

1. Remove the frequency counter. (Refer to the frequency counter removal instruction.)
2. Loosen the four (4) screws (nos. 1~4) for the joint, as shown in fig. 20.
3. Slide the joint in the direction of arrow, as shown in fig. 20.
4. Remove the six (6) screws (nos. 1~6) for the shaft, as shown in fig. 21.
5. Remove the shaft.
6. To reassemble, reverse the above procedure and read the following notes.

Notes:

1. Turn switch shaft fully counter-clockwise.
2. Set the switch lever at the position, as shown in fig. 22.

■ TO REMOVE PC BOARD (FM, MW RF Circuit)

1. Remove the frequency counter. (Refer to the frequency counter removal instruction.)
2. Remove the front panel. (Refer to the front panel removal instruction.)
3. Remove the dial scale.
4. Remove the dial cord.
5. Turn dial drum fully counter-clockwise.
6. Loosen the four (4) screws (nos. 5~8) for the joint, as shown in fig. 20.
7. Remove the dial drum.
8. Set the band switch to "SW₂~e" position.
9. Remove the switch wire in the direction of arrow, as shown in fig. 23.
10. Remove the six (6) screws (nos. 7~12) for the PC board, as shown in fig. 21.
11. Remove the PC board.
12. To reassemble, reverse the above procedure and read the following notes.

Notes:

1. Set the tuning capacitor to maximum capacity.
2. Set the dial drum at the position, as shown in fig. 24.
3. Set the switch lever at the position, as shown in fig. 25.
4. Refer to dial cord installation (SW₁/MW/FM).

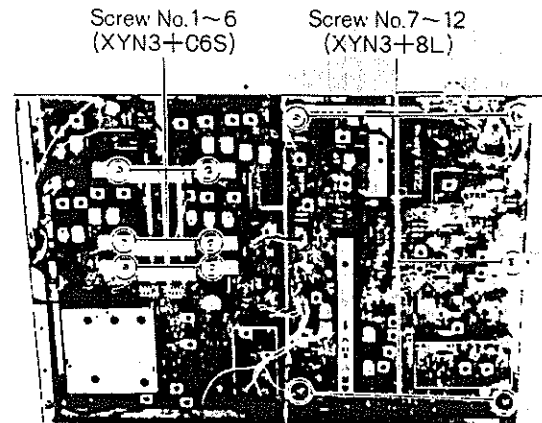


Fig. 21

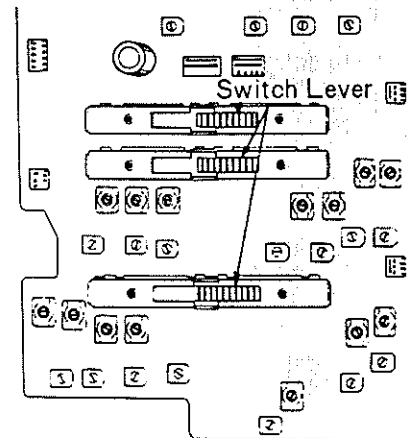


Fig. 22

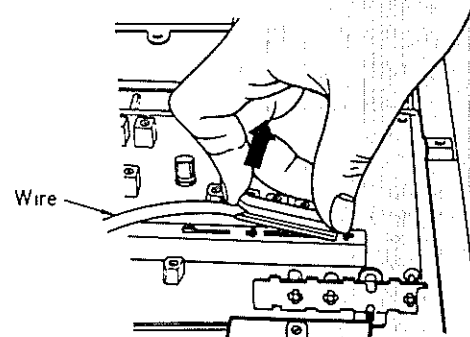


Fig. 23

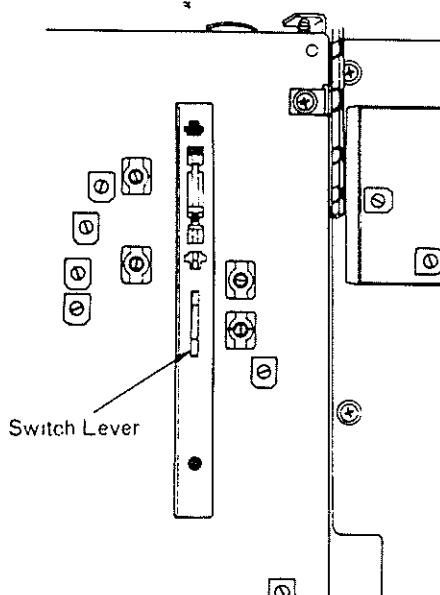


Fig. 25

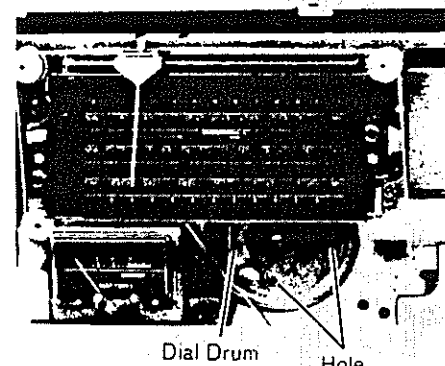



Fig. 24

■ TO REMOVE DIAL MECHANISM

1. Remove the front panel. (Refer to the front panel removal instruction.)
2. Remove the PC board (VFO circuit). (Refer to PC board removal instruction.)
3. Remove the dial cord.
4. Remove the four (4) screws (nos. 1~4) for the dial mechanism, as shown in fig. 26.
5. Remove the dial mechanism.
6. To reassemble, reverse the above procedure and read the following notes.

Note:

1. Refer to dial cord installation (SW₂~8).

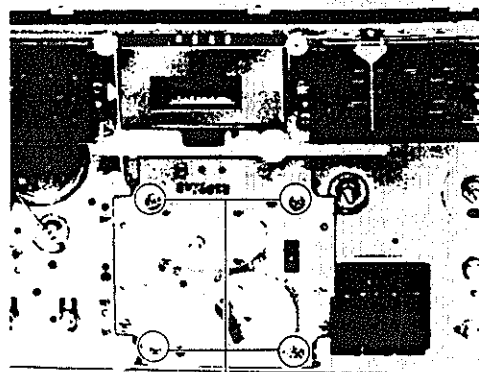

Screw No.1~4 (XYN3+C6S)

Fig. 26

■ DIAL CORD INSTALLATION GUIDE

• SW₁ /MW/FM

1. Remove the front panel. (Refer to the front panel removal instruction.)
2. Remove the dial scale.
3. Turn the dial drum fully counter-clockwise.
4. Cord length is 90 cm (35 $\frac{1}{8}$ "').
5. Arrows (1~10) indicate correct order and direction of cord installation, as shown in fig. 27.
6. Cement cord ends.
7. Turn tuning shaft fully counter-clockwise.
8. Attach pointer to cord.
9. Set pointer to "0" point of dial scale.

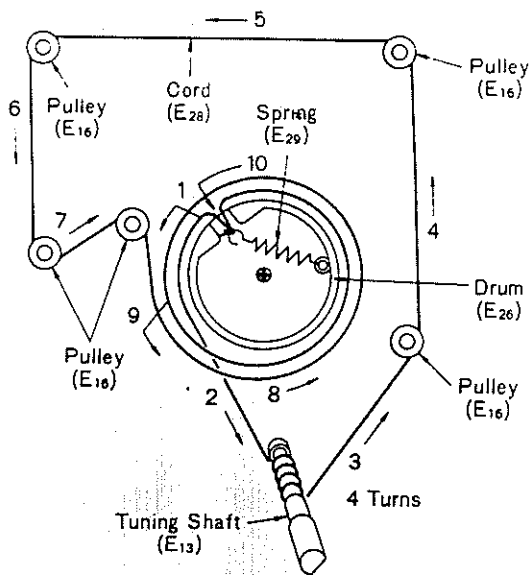


Fig. 27

• SW₂ ~SW₈

1. Remove the front panel. (Refer to the front panel removal instruction.)
2. Turn tuning shaft fully clockwise.
3. Cord length is 115 cm (47 $\frac{1}{4}$ "').
4. Arrows (1~9) indicate correct order and direction of cord installation, as shown in fig. 28.
5. Turn tuning shaft fully counter-clockwise.
6. Attach pointer to cord.
7. Set pointer to start point of dial scale.

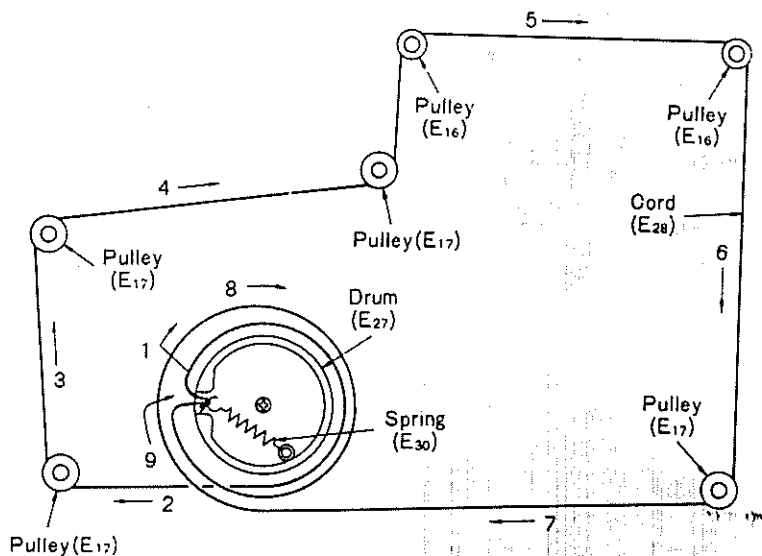


Fig. 28

■ HOW TO REPLACE CHIPS (RESISTOR, CAPACITOR, JUMPER)

1. Remove solder from chip by using solder sucker.
2. Remove chip with tweezers by rotating it while removing solder as shown in fig.29.
3. Solder circuit board first and then solder chip in the direction of the arrow as shown in fig.30.

Notes:

1. Do not use chip again which is removed from P.C. Board.
2. Use lead wire with insulator for replacement instead of chip jumper.

Color	Original Parts Name
Black	Chip Resistor
Brown	Chip Capacitor
Blue	Chip Jumper

■ NOTE FOR REPLACING CHIPS

1. Do not heat chips more than three (3) seconds.
2. Be careful not to damage the electrode of chips.
3. Use soldering iron (less than 60 W) and tweezers for replacing chips.

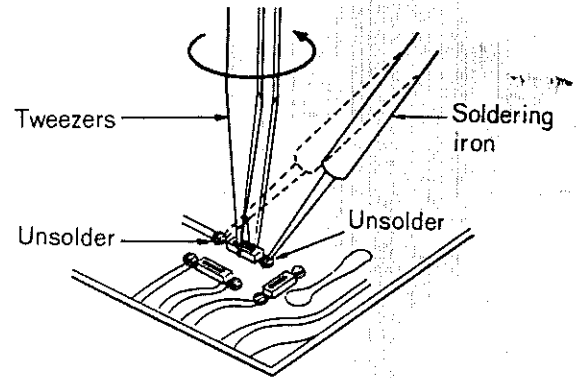


Fig. 29

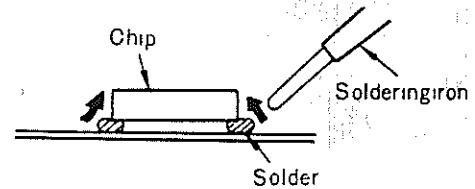


Fig. 30

CABINET PARTS

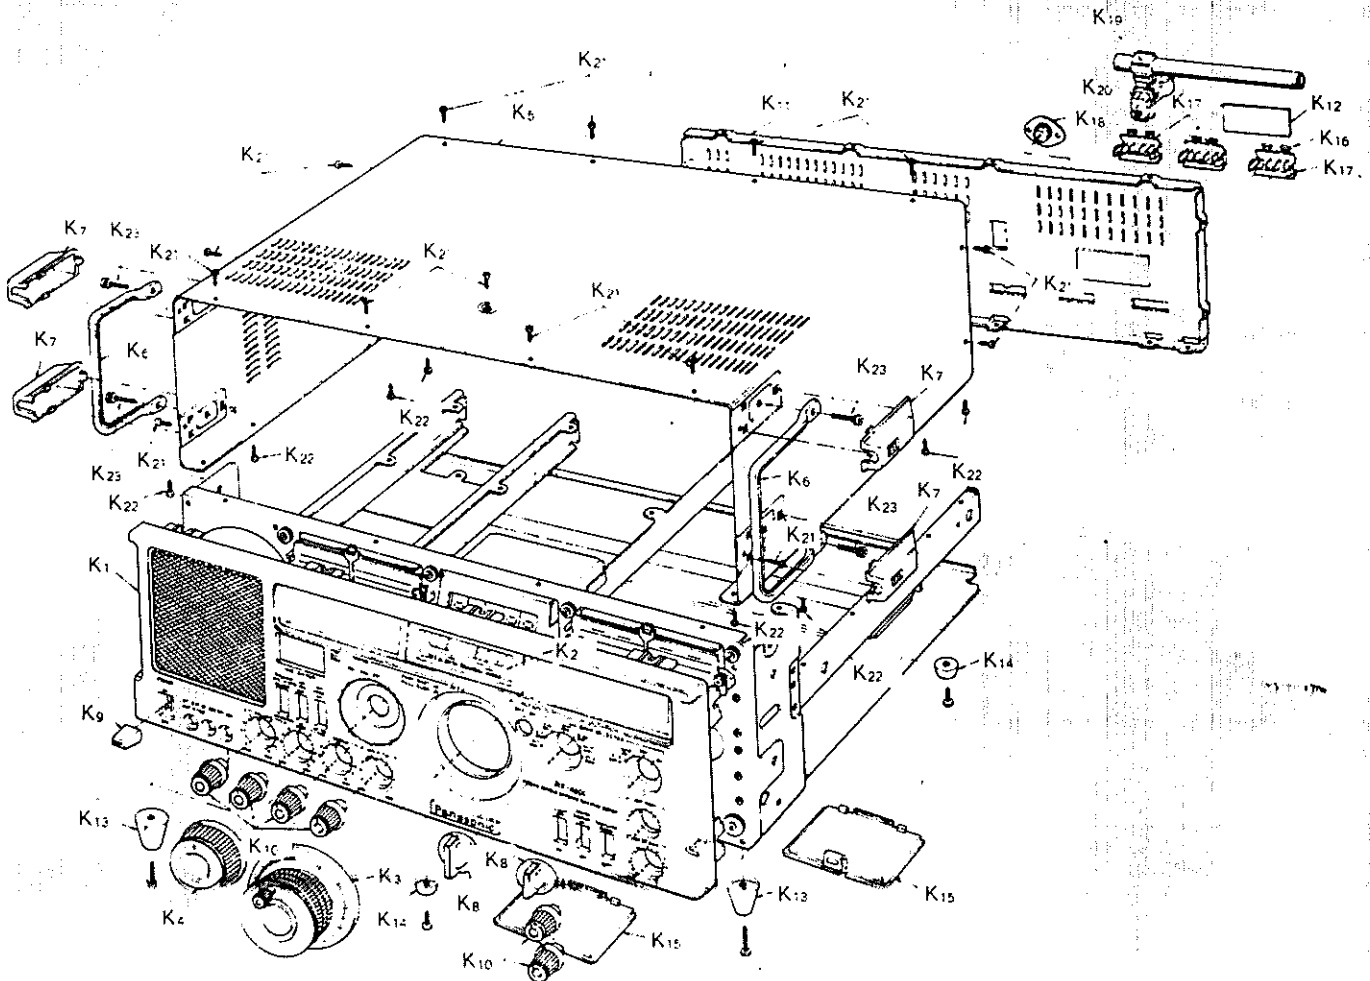


Fig. 31

VOLTAGE

IC1			Q1		Q2		Q3		Q4		Q5		Q6		Q7		Q8	
1	4.7V	0V	S	0V	C	0V	C	1.25V	C	0V	C	0V	C	0V	C	SW4	C	SW5,8
2	0V	0.72V	G	0V	B	4.3V	B	3.9V	B	4.33V	B	4.33V	B	4.31V	B	1.26V	C	5.51V
3	0V	0V	D	1.7V	E	5.06V	E	4.68V	E	5.04V	E	5.04V	E	5.03V	E	0.62V	B	1.26V
4	0V	2.76V	ID	2mA	Ie	1mA	Ie	1.2mA	Ie	0.5mA	Ie	0.5mA	Ie	0.7mA	Ie	0.4mA	E	0.6V
5	0V	3.79V															Ie	0.4mA
6	0V	4.95V																
7	0V	4.95V																
8	0V	3.8V																
9	0V	0V																
10	0.79V	0V																
11	4.72V	0V																
12	4.78V	0V																
13	0.82V	0V																
14	0.71V	0V																
15	4.79V	0V																
16	0.74V	0V																


IC2		Q31		Q32		Q33		Q34		Q35		Q36		Q37		Q38	
1	12V	C	1.58V	C	0V	C	0V	C	2.78V	C	5.44V	C	2.22V	C	SW2-8	C	LW,MW,SW1
2	9.67V	B	4.32V	B	3.74V	B	3.5V	B	0.75V	B	0.58V	B	0.96V	B	11.91V	B	5.3V
3	9.31V	E	5.04V	E	4.46V	E	4.1V	E	0.13V	E	0V	E	0.36V	E	6.2V	E	3.15V
4	7.32V	Ie	0.8mA	Ie	0.65mA	Ie	1.3mA	Ie	0.8mA	Ie	0mA	Ie	0.76mA	Ie	25mA	Ie	2.4mA
5	1.41V																
6	5.98V																
7	5.77V																
8	5.71V																
9	5.71V																
10	5.77V																
11	1.36V																
12	0V																
13	0V																
14	5.95V																
15	—																
16	—																

Q39		Q40		Q41		Q43	
C	0.03V	C	0.01V	C	0.01V	C	0.01V
B	0.71V	B	0.7V	B	0.7V	B	0.7V
E	0V	E	0V	E	0V	E	0V
Ie	0.4mA	Ie	0.4mA	Ie	1.5mA	Ie	0.4mA

Q901		Q902		Q903		Q904		Q905	
C	4.5V	C	3.5V	C	4V	C	4.8V	C	4.9V
B	1.25V	B	0.53V	B	0.06V	B	4.2V	B	4.3V
E	0.96V	E	0.56V	E	0V	E	4.9V	E	4.9V

Q906		Q907		Q908		Q42	
C	4.9V	C	2.5V	C	2.5V	C	5.5V
B	0V	B	4.2V	B	4.9V	B	4.1V
E	4.2V	E	4.9V	E	4.9V	E	3.36V
Ie	—	Ie	—	Ie	—	Ie	3.4mA

IC902(RVIM54824P) BLOCK DIAGRAM

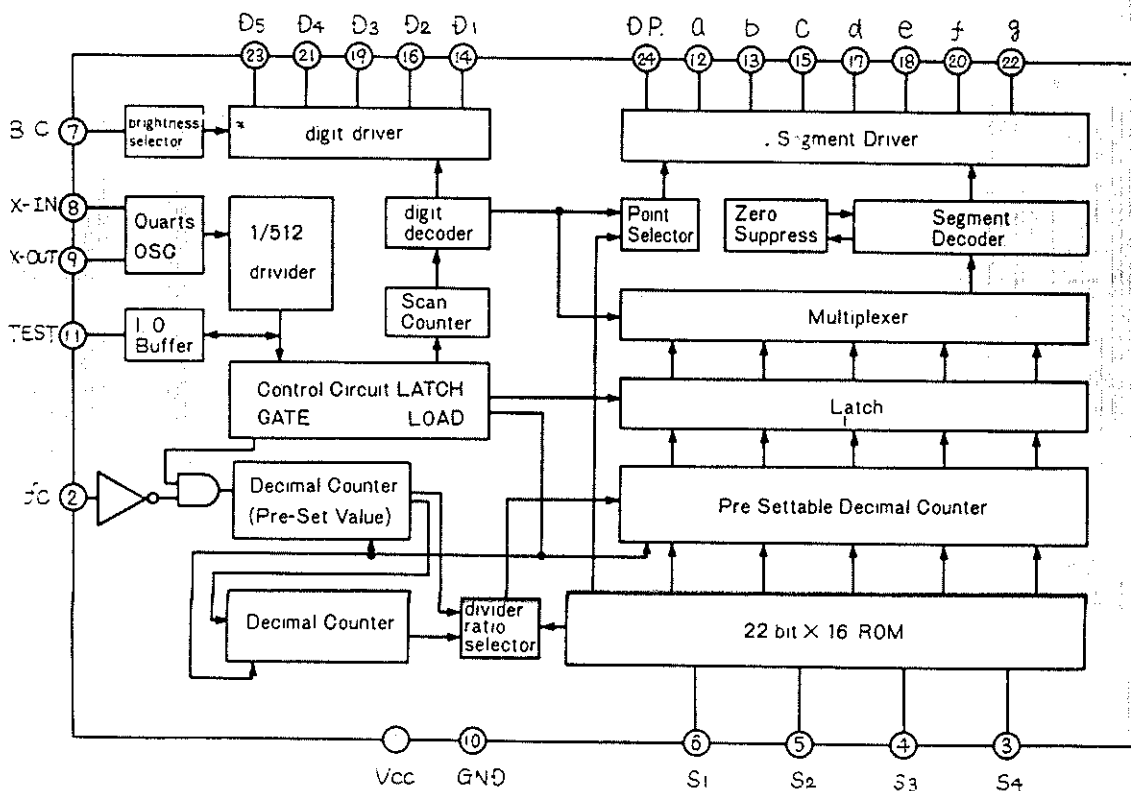

ALIGNMENTS


TUNE/BATT METER ADJUSTMENT

1. RADIO RECEIVER SETTING

- Set band switch to MW.
- Set volume control MIN.
- Set indicator switch to BATT.
- Set AM mode switch to AM.
- Set power source voltage to 7.2 volts DC.

2. REMARKS

- Adjust R_{274} so that the pointer of meter stays as shown in figure right.

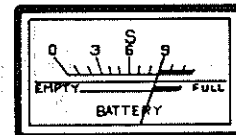

ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Notes:

1. Set power switch to ON.
2. Set volume control to MAX.
3. Set bass and treble control to center.
4. Set band switch to MW, SW₁~SW₆ or FM.
5. Set SW cal control to center.
6. Set AM RF gain control to DX.
7. Set FM AFC/Band width switch to WIDE or OFF (FM).
8. Set light switch to OFF.
9. Set AM ANL switch to OFF.
10. Set BFO pitch control to center.
11. Set digital display switch to OFF.
12. Set AM mode switch to AM or SSB/CW.
13. Set indicator switch to signal.
14. Set ANT trim control to center.
15. Output of signal generator should be no higher than necessary to obtain an output reading.

MW, SW ALIGNMENT

BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
	CONNECTIONS	FREQUENCY				
AM-IF ALIGNMENT						
(1) MW	Fashion loop of several turns of wire and radiate signal into loop of receiver.	455 kHz 30% Mod. at 400 Hz	Point of non-interference.	Output meter across voice coil.	T ₄ (AM 1st IFT) T ₅ (AM 2nd IFT) T ₉ (AM 3rd IFT) T ₁₀ (AM 4th IFT) T ₈ (AM 5th IFT)	Adjust for maximum output.
BFO ALIGNMENT Note: Set band width switch to "Narrow".						
MW	"	600 kHz	Tune to signal.	Audio output from speaker.	L ₅₂ (BFO OSC Coil)	1. Cut off modulation after tune signal. 2. Set AM mode switch to CW/SSB. 3. Adjust for zero beat.
SW-1st IF and 2nd OSC ALIGNMENT						
(3) SW2	Connect EXT ANT (SW ₂ ~ ₈) terminal.	2 MHz	Point of non-interference.	Output meter across voice coil.	L ₄₆ (SW 2nd OSC Coil) T ₁ (SW 1st IFT) T ₂ (SW 1st IFT)	Adjust for maximum output.
SW3	"	"	"	"	L ₄₉ (SW 2nd OSC Coil)	"
MW-RF ALIGNMENT						
(4) MW	Fashion loop of several turns of wire and radiate signal into loop of receiver.	550 kHz	550 kHz 2.4 mm ($\frac{3}{32}$ ")	Output meter across voice coil	L ₅₀ (MW OSC Coil) L ₄₃ (MW ANT Coil)	Adjust for maximum output.
(5) MW	"	1500 kHz	1500 kHz 57 mm (2 $\frac{1}{4}$ ")	"	C ₂₂₇ (MW OSC Trimmer) C ₂₀₁ (MW ANT Trimmer)	Adjust for maximum output. Repeat steps (4) and (5).

■ SW4~7 X' tal ALIGNMENT Note: Pull out socket **CP₆**.

BAND	CONNECTIONS	ADJUSTMENT	REMARKS
SW4	Connect RF voltmeter: ⊕ side to TP₁ ⊖ side to E	C ₁₀₁ (Trimmer) L ₃₉ (39 MHz Coil)	1. Turn C ₁₀₁ to its center position. 2. Adjust L ₃₉ (Turn to upper) until 25 mV ± 1 mV is read on RF voltmeter.
SW4	Connect frequency counter: ⊕ side to TP₁ ⊖ side to E	C ₁₀₁ (Trimmer)	Adjust C ₁₀₁ until 39, 100 MHz ± 100 Hz is read on frequency counter.
SW4	Connect RF voltmeter: ⊕ side to TP₃ ⊖ side to E	L ₃₀ (31 MHz Coil)	Adjust L ₃₀ (Turn to upper) until 30 mV ± 1 mV is read on RF voltmeter.
SW5	"	L ₃₁ (27 MHz Coil)	Adjust L ₃₁ (Turn to upper) until 30 mV ± 1 mV is read on RF voltmeter.
SW7	"	L ₃₂ (19 MHz Coil)	Adjust L ₃₂ (Turn to upper) until 30 mV ± 1 mV is read on RF voltmeter.

■ 44~48 MHz BPF ALIGNMENT Note: Pull out socket **CP₆**.

BAND	SWEEP GENERATOR		SWEEP SCOPE	ADJUSTMENT	REMARKS
	CONNECTIONS	FREQUENCY			
SW4	Connect to test point TP₁ through ceramic capacitor (0.01 μ F) negative side to point E	44.48 MHz	Connect to test point TP₂ negative side to point E	L ₃₅ (BPF Coil) L ₃₆ (BPF Coil) L ₃₇ (BPF Coil)	1. Turn L ₃₅ to lower before adjustment. 2. Adjust L ₃₆ and L ₃₇ for maximum amplitude.

■ TRAP ALIGNMENT Note: Pull out socket **CP₆**.

BAND	CONNECTIONS	ADJUSTMENT	REMARKS
SW4	Connect RF voltmeter: ⊕ side to TP₂ ⊖ side to E	L ₃₅ (Trap Coil)	Adjust L ₃₅ for minimum RF voltmeter reading.
SW5	Connect RF voltmeter: ⊕ side to TP₄ ⊖ side to E	L ₂₈ (Trap Coil)	Adjust L ₂₈ for minimum RF voltmeter reading.
SW7	"	L ₂₉ (Trap Coil)	Adjust L ₂₉ for minimum RF voltmeter reading.

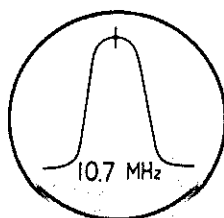


Fig. 32

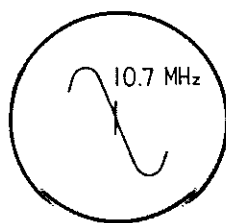


Fig. 33

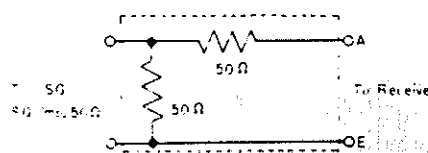


Fig. 34 FM Dummy Antenna

■ SW RF ALIGNMENT

	BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
		CONNECTIONS	FREQUENCY				
SW1-RF ALIGNMENT							
(1)	SW1	Connect to EXT ANT (MW/SW1) terminal.	1.6 MHz	1.6 MHz 2.9 mm ($\frac{1}{8}$ ")	Output meter across voice coil.	L ₅₁ (SW1 OSC Coil) L ₄₄ (SW1 ANT Coil)	Adjust for maximum output.
(2)	SW1	"	3 MHz	3 MHz 58.1mm($2\frac{1}{8}$ ")	"	C ₂₂₉ (SW1 OSC Trimmer) C ₂₀₇ (SW1 ANT Trimmer)	Adjust for maximum output. Repeat steps (1) and (2).
SW2-RF ALIGNMENT							
(3)	SW2	Connect to EXT ANT (SW2~SW8) terminal.	3 MHz	3 MHz 3mm ($\frac{1}{8}$ ")	"	L ₅ (SW2 TUNE Coil) L ₁ (SW2 ANT Coil)	Adjust for maximum output.
(4)	SW2	"	7 MHz	7 MHz 62.7mm($2\frac{3}{8}$ ")	"	C ₃₃ (SW2 TUNE Trimmer) C ₁₀ (SW2 ANT Trimmer)	Adjust for maximum output. Repeat steps (3) and (4).
SW3-RF ALIGNMENT							
(5)	SW3	"	7 MHz	7 MHz 3mm ($\frac{1}{8}$ ")	"	L ₁₀ (SW3 TUNE Coil) L ₂ (SW3 ANT Coil)	Adjust for maximum output.
(6)	SW3	"	11.01 MHz	11.01 MHz 64.6mm ($2\frac{3}{8}$ ")	"	C ₃₄ (SW3 TUNE Trimmer) C ₁₁ (SW3 ANT Trimmer)	Adjust for maximum output. Repeat steps (5) and (6).
SW4-RF ALIGNMENT							
(7)	SW4	"	11.01 MHz	11.01 MHz 3mm ($\frac{1}{8}$ ")	"	L ₁₁ (SW4 TUNE Coil) L ₃ (SW4 ANT Coil)	Adjust for maximum output.
(8)	SW4	"	15.01 MHz	15.01 MHz 62.7mm ($2\frac{3}{8}$ ")	"	C ₃₅ (SW4 TUNE Trimmer) C ₁₂ (SW4 ANT Trimmer)	Adjust for maximum output. Repeat steps (7) and (8).
SW5-RF ALIGNMENT							
(9)	SW5	"	15.01 MHz	15.01 MHz 3mm ($\frac{1}{8}$ ")	"	L ₁₂ (SW5 TUNE Coil) L ₄ (SW5 ANT Coil)	Adjust for maximum output.
(10)	SW5	"	19.01 MHz	19.01 MHz 62.7mm($2\frac{3}{8}$ ")	"	C ₃₆ (SW5 TUNE Trimmer) C ₁₃ (SW5 ANT Trimmer)	Adjust for maximum output. Repeat steps (9) and (10).
SW6-RF ALIGNMENT							
(11)	SW6	"	19.01 MHz	19.01 MHz 3mm ($\frac{1}{8}$ ")	"	L ₁₃ (SW6 TUNE Coil) L ₅ (SW6 ANT Coil)	Adjust for maximum output.
(12)	SW6	"	23.01 MHz	23.01 MHz 64.6mm ($2\frac{3}{8}$ ")	"	C ₃₇ (SW6 TUNE Trimmer) C ₁₄ (SW6 ANT Trimmer)	Adjust for maximum output. Repeat steps (11) and (12).
SW7-RF ALIGNMENT							
(13)	SW7	"	22.01 MHz	22.01 MHz 3mm ($\frac{1}{8}$ ")	"	L ₁₄ (SW7 TUNE Coil) L ₆ (SW7 ANT Coil)	Adjust for maximum output.
(14)	SW7	"	26.01 MHz	26.01 MHz 62.7mm ($2\frac{3}{8}$ ")	"	C ₃₈ (SW7 TUNE Trimmer) C ₁₅ (SW7 ANT Trimmer)	Adjust for maximum output. Repeat steps (13) and (14).
SW8-RF ALIGNMENT							
(15)	SW8	"	26.00 MHz	26.00 MHz 3mm ($\frac{1}{8}$ ")	"	L ₄₂ (SW8 OSC Coil) L ₁₅ (SW8 TUNE Coil) L ₇ (SW8 ANT Coil)	Adjust for maximum output.
(16)	SW8	"	30.00 MHz	30.00 MHz 64.6mm($2\frac{3}{8}$ ")	"	C ₁₀₈ (SW8 OSC Trimmer) C ₃₉ (SW8 TUNE Trimmer) C ₁₆ (SW8 ANT Trimmer)	Adjust for maximum output. Repeat steps (15) and (16).

FM ALIGNMENT

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING [DISTANCE]	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
CONNECTIONS	FREQUENCY				
FM-IF ALIGNMENT					
High side thru. 0.001 μ F to point TP₇ . Negative side to point E .	10.7 MHz (400 kHz SWP.)	Point of non-interference. (on/about 90 MHz).	Connect vert. amp. of scope to point TP₅ . Negative side to point E .	T ₃ (FM 1st IFT) T ₆ (FM 2nd IFT) (Primary)	Adjust for maximum amplitude. (Refer to fig. 32).
"	"	"	"	T ₇ (FM 2nd IFT) (Secondary)	Adjust for maximum amplitude. (Refer to fig. 33).
FM-RF ALIGNMENT					
Connect to EXT ANT (FM) terminal through FM dummy antenna. (Refer to fig. 34).	87.2 MHz	Variable capacitor fully closed.	Output meter across voice coil.	L ₄₅ (FM OSC Coil)	(*) Adjust for maximum output.
"	90 MHz	Tune to signal.	"	L ₄₆ (FM TUNE Coil)	(*) Adjust for maximum output.
"	106 MHz	106 MHz 53.1mm (2 $\frac{3}{32}$ ")	"	C ₂₂₂ (FM OSC Trimmer) C ₂₁₈ (FM TUNE Trimmer)	(*) Adjust for maximum output. Repeat steps (3)~(5).
(*) Three output responses will be present; proper tuning is the center frequency.					

ALIGNMENT POINTS

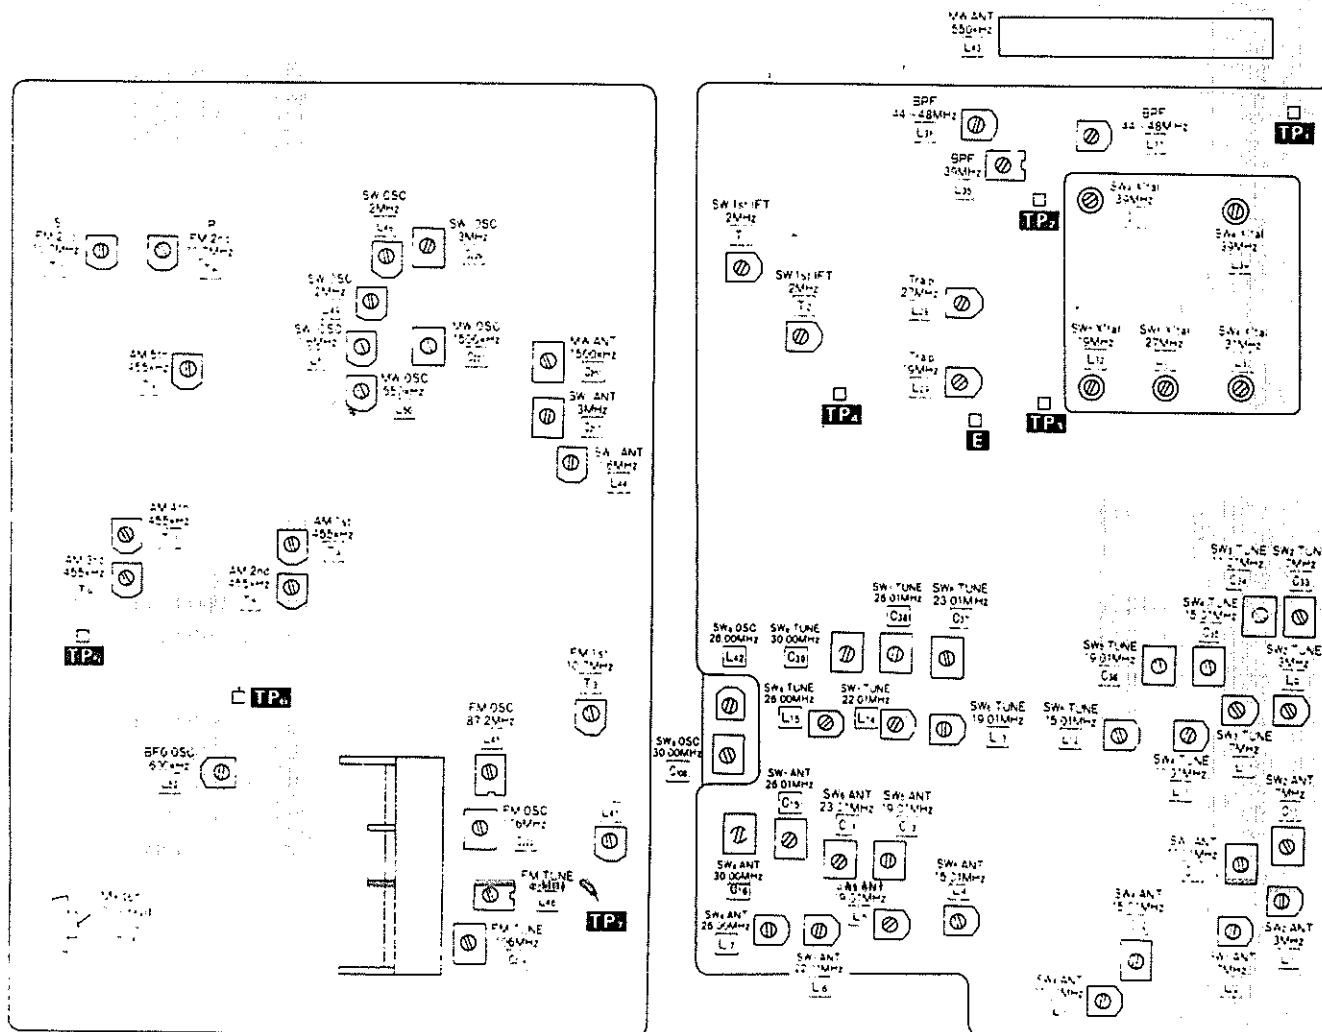


Fig. 35

Schematic Diagram (COUNTER CIRCUIT) - Model RF-4900 / ©

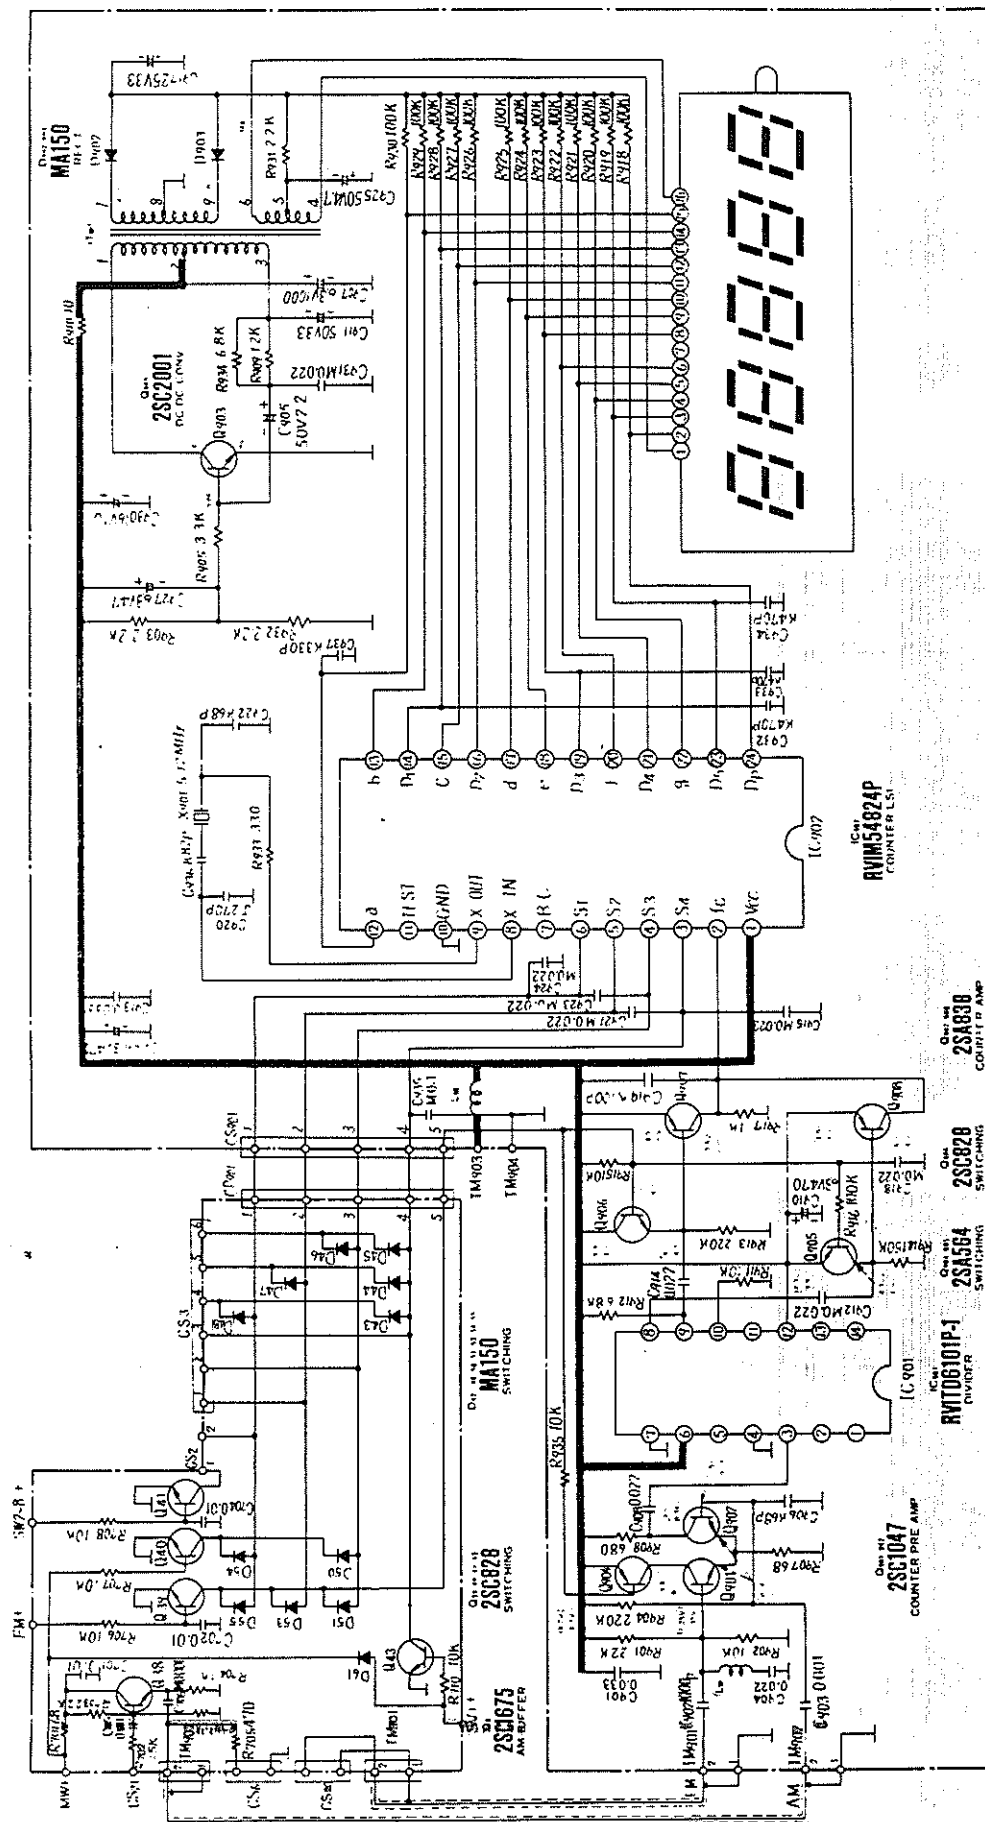


Fig. 36

Block Diagram

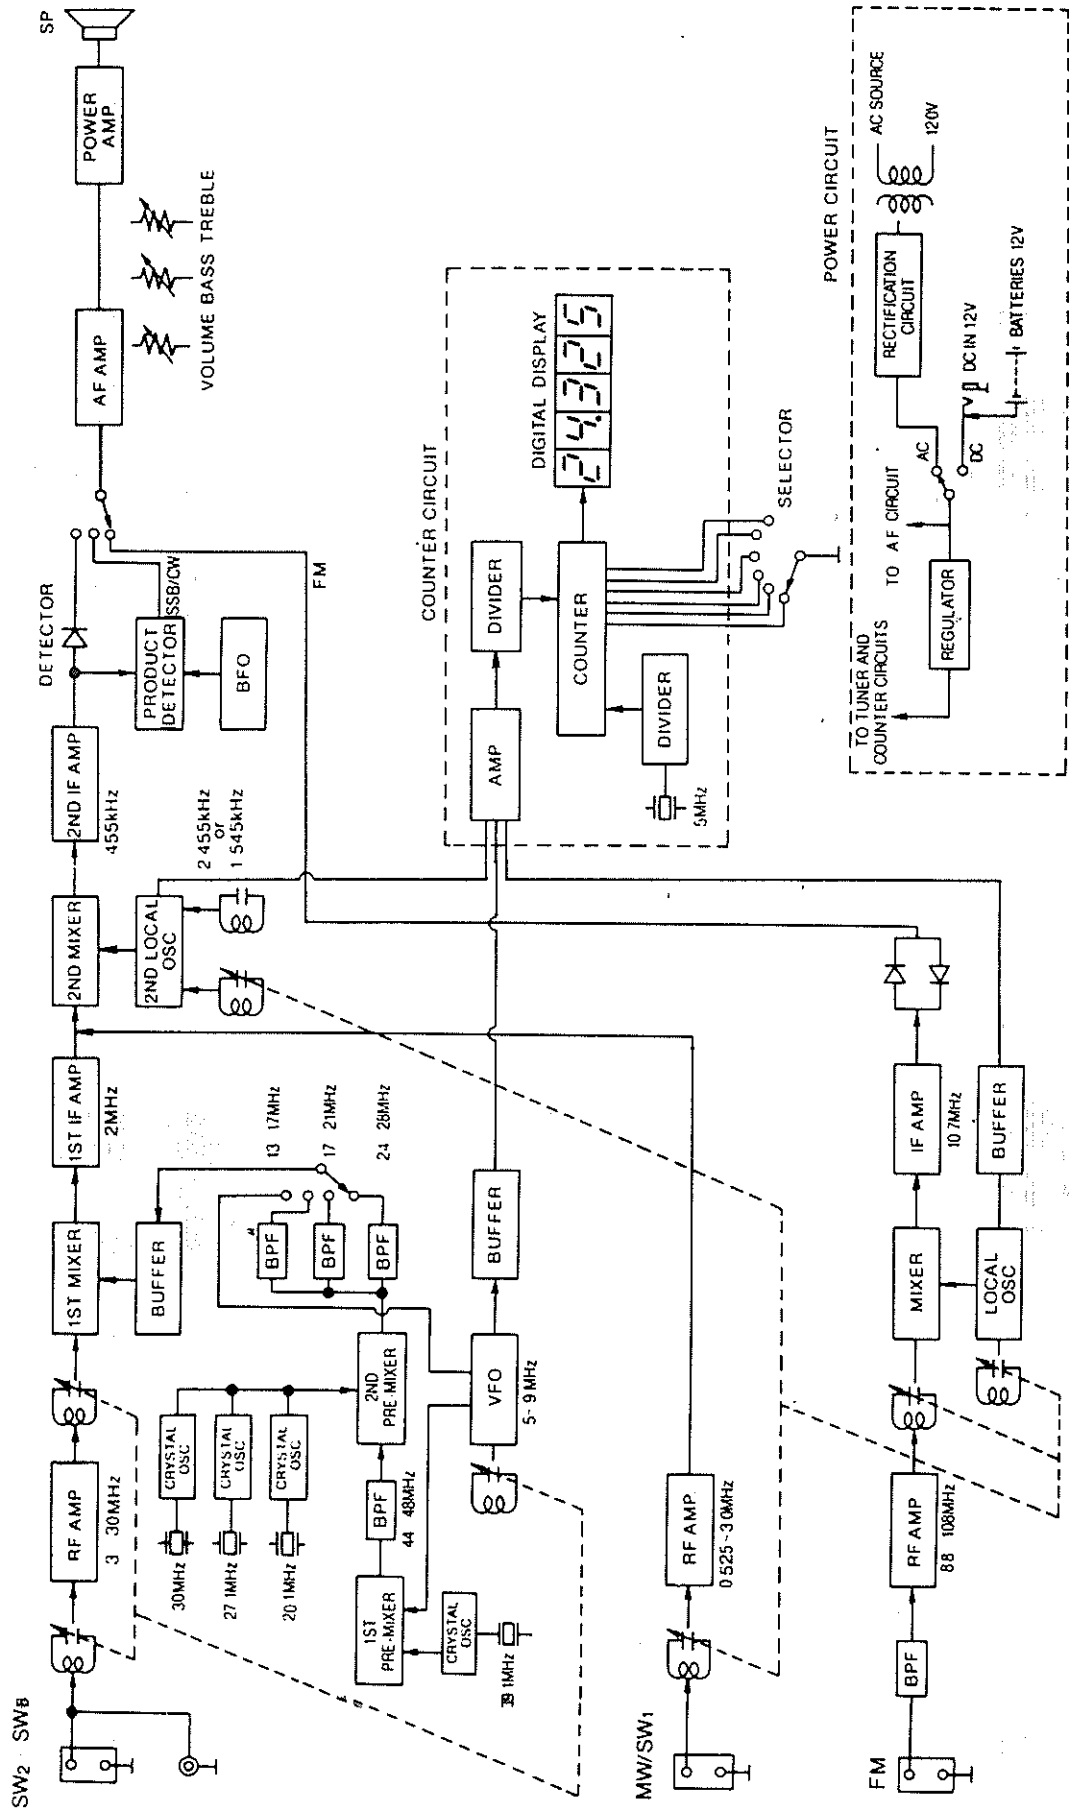


Fig. 37

CHASSIS PARTS LOCATION

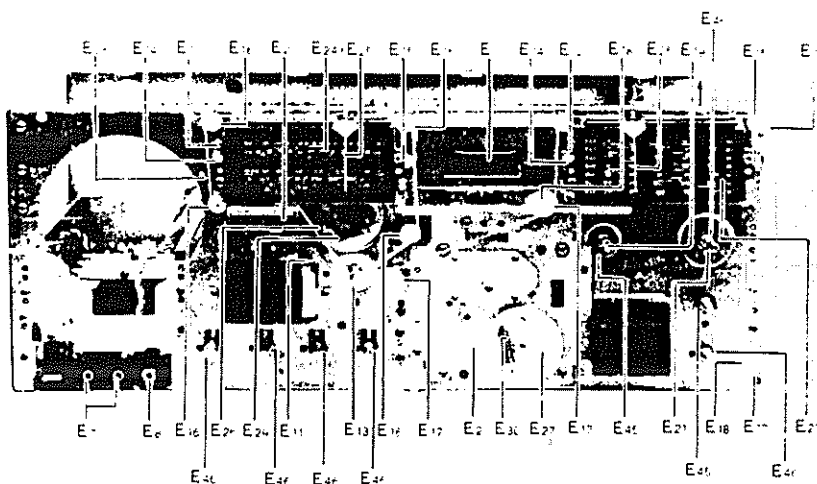


Fig. 38

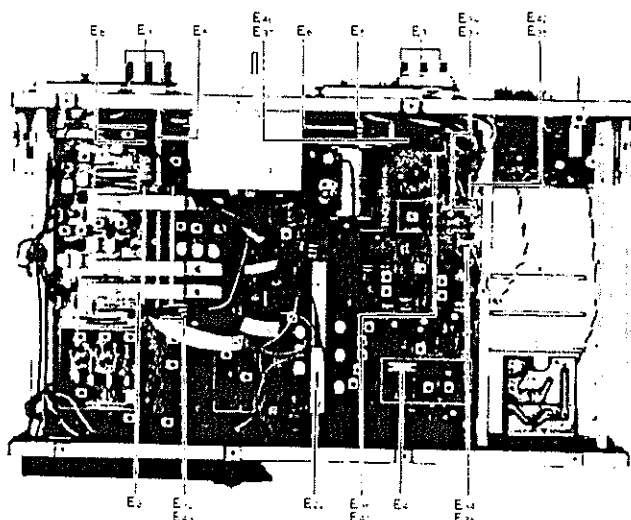


Fig. 39

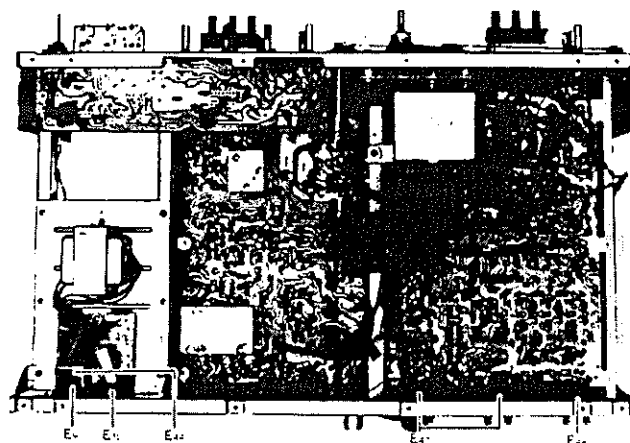


Fig. 40

REPLACEMENT PARTS LIST..... Model RF-4900/c (RD7811-1630C)

NOTES: 1 Part numbers are indicated on most mechanical parts. Please use this part number for parts orders. 2 Components identified by shaded area have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts. 3 The 5 mark is service standard parts and may differ from production parts. 4 The 6 mark is used by the manufacturing only.

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
INTEGRATED CIRCUITS, TRANSISTORS AND DIODES				
IC1	RV1PC1018CE	IC, FM/AM IF Amp.	1	
IC2	RV1JA4201	IC, AF & Power Amp.	1	
IC902	RV1A4824P	IC, Counter LSI	1	
IC901	RV1D6101P-1	IC, Divider	1	
Q1,16	2SK49	Transistor (Si), SW RF Amp., FM RF Amp.	2	
Q2,3,4,5,6,10,13,14,15,17,24,30,31,32,907,908	2SA58	Transistor (Ge), SW RF Amp., SW Mixer, Buffer, 2nd Pre Mix, 1st Pre Mix, VFO	16	
Q7,8,9,11,35,38	2SC375	Oscillator, FM Oscillator, FM IF Amp, AM IF Amp.	6	
Q12	2SC347	Transistor (Si), Oscillator	1	
Q18	2SC347	Transistor (Si), Regulator	1	
Q19,39,40,41,43,906	2SC34	Transistor (Si), AM RF Amp.	1	
Q20,34,36,37	2SC28	Transistor (Si), RF Gain Control	6	
Q903	2SC215	Transistor (Si), Switching, SSB AF Amp, AF Amp, Regulator	4	
Q33,904,905	2SC201	Transistor (Si), Digit Driver	1	
Q42,901,902	2SA34	Transistor (Ge), BFO Oscillator	3	
D1,2,11,12,16,23,24,25,27,28	OA90	Diode (Ge), SW AGC, AM AGC, FM AGC, Pre Amp, AM Meter Rectifier	10	(S)
D3,4,5,14,15,17,18,19,20,30,60,902,903,43,44,45,46,47,48,50,51,53,54,61	MA1A	Diode (Si), Switching, ANL	25	(S)
D6	RV1DQA0106RF	Diode (Si), Zener	1	
D8,9	RV1DAD1262L	Diode (Si), AOC	2	
D10,13,29,38	RV1DAD113	Diode (Si), Count Adjust, FM AFC, BFO Detector	4	(S)
D21,22,31,32,33,34	2-OA90	Diode (Ge), FM Detector, BFO Detector	6	
D26	RV1DAD1160L	Diode (Si), AOC	1	(S)
D35	RV1DAD206	Diode (Si), Zener	1	
D36,37	SM13	Diode (Si), Rectifier	2	(S)
D39	RV1DAD1261M	Diode (Si), AOC	1	
D7	RV1DAD1261L	Diode (Si), AOC	1	(S)

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
CERAMIC FILTERS, COILS AND TRANSFORMERS				
CPL2,3	RVF107MFR	Ceramic Filter	3	
CP4	RVFLFB4	Ceramic Filter	1	
L1,9	RLA3M32	Antenna Coil or Tuning Coil, SW2	2	
L2,10	RLA3M33	Antenna Coil or Tuning Coil, SW3	2	
L3,11	RLA3M34	Antenna Coil or Tuning Coil, SW4	2	
L4,12	RLA3M35	Antenna Coil or Tuning Coil, SW5	2	
L5	RLA3M48	Antenna Coil, SW6	1	
L6	RLA3M49	Antenna Coil, SW7	1	
L7	RLA3M39	Antenna Coil, SW8	1	
L14,28,29	RLA3M37	Tuning Coil, SW7, Trap Coil	3	
L15	RLA3M38	Tuning Coil, SW8	1	
L13	RLA3M36	Tuning Coil, SW6	1	
L30,31,32,36,37,39	RL09M7	Oscillator Coil, Xtal, BPF Coil	6	
L35	RLD4M5	Coil, Trap	1	
L42	RL03M52	Oscillator Coil, SW2	1	
L43	RLP2E41	Antenna Coil, MW	1	
L44	RLA3M31	Antenna Coil, SW1	1	
L45	RLD4M1	Oscillator Coil, FM	1	
L46	RLD4M8	Antenna Coil, FM	1	
L47	RLI4M103	Coil, Trap	1	
L48,51	RL03M51	Oscillator Coil, 2nd Local & SW1	2	
L49	RL09M6	Oscillator Coil, 2nd Local	1	
L50	RL02M16	Oscillator Coil, MW	1	
L52	RL09M8	Oscillator Coil, BFO	1	
T1	RLJ9M3	IFT, SW 1st	1	
T2	RLI9M4	IFT, SW 1st	1	
T3	RLI4M101	IFT, FM 1st	1	
T4,9,10	RLI2M212	IFT, AM 1st, 3rd, 4th	3	
T5	RLI2M208	IFT, AM 2nd	1	
T6	RLI4M504	IFT, FM 2nd (Primary)	1	
T7	RLI4M506	IFT, FM 2nd (Secondary)	1	
T8	RLI2M402	IFT, AM 5th	1	
T11	RLT5K331A	Power Transformer	1	
T901	RLT9E2	Power Transformer, Display	1	

VARIABLE RESISTORS				
R1	EVHMA088A14	Variable Resistor, 10KΩ (A), RF Gain Control	1	
R201	EVL D8AT12B14	Variable Resistor, 10KΩ (B), SW2~8 CAL	1	
R274	EVL T4AA00B14	Variable Resistor, 10KΩ (B), Preset, Meter Control	1	(S)
R306	EVH8SA029B14	Variable Resistor, 10KΩ (B), BFO Pitch	1	
R310,313,315	EVH8SA029A14	Variable Resistor, 10KΩ (A), Bass, Treble & Volume Control	3	
VARIABLE CAPACITORS				
C1	RCVC321A152	Tuning Capacitor	1	
C10,201	RCV1PX10AGS	Trimmer Capacitor	2	

Ref No	Part No.	Part Name & Description	Per Set	Remarks
C11-16, 33-39, 108,218,222 227,229	RCVXPX20AGS	Trimmer Capacitor	18	
C214,216,219 221	RCVGV45D112	Tuning Capacitor	1	
C101,207	RCVVPX30AGS	Trimmer Capacitor	1	
C104,105,110	RCVGV35D112	Tuning Capacitor	1	
COMPONENT COMBINATIONS AND CRYSTALS				
Z1	RXA3PMF1	Component Combination, Coils & Capacitors	1	
Z2	EXA3DLO4CC	Component Combination, 330PPF, 3, 4.7KΩ, 2	1	
X1	RVC339100N3R	Crystal	1	
X2	RVC331100N3R	Crystal	1	
X3	RVC327100N3R	Crystal	1	
X4	RVC320100N3R	Crystal	1	
X901	RVC35120N5Z	Crystal, 5MHz	1	
SPEAKER				
SP	EAS10P72S	Speaker, Imp. 4Ω, 10cm(4"), PM Dynamic	1	
SWITCHES				
S1-1-S3-6	ESR36BS1	Switch, Band (SW2~8)	3	
S4-1-S4-10	ESA3625	Switch, Band (PM/MW/SW1/SW2~8)	1	
S5-7-S8-1	RSTX003Y	Switch, Light, Digital Display, Indicator, FM AFC/Band Width, MW ANL or AM Mode	2	
S10-1, S10-2	RST51YS	Switch, Power	1	
RESISTORS				
R2	ERD25TJ681	680Ω, 1/2Watt, 5%, Carbon	1	
R3	ERD25TJ221	220Ω, 1/2Watt, 5%, Carbon	1	
R4	ERD25TJ101	100Ω, 1/2Watt, 5%, Carbon	1	
R5	ERD25TJ470	470Ω, 1/2Watt, 5%, Carbon	1	
R6	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R7	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R8	ERD25TJ471	470Ω, 1/2Watt, 5%, Carbon	1	
R9	ERD25TJ681	680Ω, 1/2Watt, 5%, Carbon	1	
R10	ERD25TJ470	470Ω, 1/2Watt, 5%, Carbon	1	
R11	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R12	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R13	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R14	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R15	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R16	ERD25TJ681	680Ω, 1/2Watt, 5%, Carbon	1	
R17	ERD25TJ101	100Ω, 1/2Watt, 5%, Carbon	1	
R18	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R19	ERD25TJ223	22KΩ, 1/2Watt, 5%, Carbon	1	
R20				

Ref No	Part No.	Part Name & Description	Per Set	Remarks
R21	ERD25TJ684	680KΩ, 1/2Watt, 5%, Carbon	1	
R22	ERD25TJ104	100KΩ, 1/2Watt, 5%, Carbon	1	
R23	ERD25TJ684	680KΩ, 1/2Watt, 5%, Carbon	1	
R24	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R25	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R28	ERD25TJ222	2.2KΩ, 1/2Watt, 5%, Carbon	1	
R31	ERD25TJ222	2.2KΩ, 1/2Watt, 5%, Carbon	1	
R32	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R33	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R34	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R35	ERD25TJ470	470Ω, 1/2Watt, 5%, Carbon	1	
R36	ERD25TJ220	22Ω, 1/2Watt, 5%, Carbon	1	
R37	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R38	ERD25TJ152	1.5KΩ, 1/2Watt, 5%, Carbon	1	
R39	ERD25TJ182	1.8KΩ, 1/2Watt, 5%, Carbon	1	
R40	ERD25TJ182	1.8KΩ, 1/2Watt, 5%, Carbon	1	
R41	ERD25TJ152	1.5KΩ, 1/2Watt, 5%, Carbon	1	
R42	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R43	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R44	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R45	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R46	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R47	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R48	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R49	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R50	ERD25TJ222	2.2KΩ, 1/2Watt, 5%, Carbon	1	
R51	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R52	ERD25TJ472	4.7KΩ, 1/2Watt, 5%, Carbon	1	
R53	ERD25TJ182	1.8KΩ, 1/2Watt, 5%, Carbon	1	
R54	ERD25TJ332	3.3KΩ, 1/2Watt, 5%, Carbon	1	
R55	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R56	ERD25TJ152	1.5KΩ, 1/2Watt, 5%, Carbon	1	
R57	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R58	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R59	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R60	ERD25TJ333	33KΩ, 1/2Watt, 5%, Carbon	1	
R61	ERD25TJ101	100Ω, 1/2Watt, 5%, Carbon	1	
R62	ERD25TJ331	330Ω, 1/2Watt, 5%, Carbon	1	
R63	ERD25TJ472	4.7KΩ, 1/2Watt, 5%, Carbon	1	
R64	ERD25TJ472	4.7KΩ, 1/2Watt, 5%, Carbon	1	
R66	ERD25TJ470	470Ω, 1/2Watt, 5%, Carbon	1	
R67	ERD25TJ152	1.5KΩ, 1/2Watt, 5%, Carbon	1	
R68	ERX1ANJ100	10Ω, 1Watt, 5%, Metal Oxide	1	
R69	ERD25TJ101	100Ω, 1/2Watt, 5%, Carbon	1	
R70	ERD25TJ101	100Ω, 1/2Watt, 5%, Carbon	1	
R71	ERD25TJ332	3.3KΩ, 1/2Watt, 5%, Carbon	1	
R73	ERD25TJ273	27KΩ, 1/2Watt, 5%, Carbon	1	
R74	ERD25TJ563	56KΩ, 1/2Watt, 5%, Carbon	1	
R202	ERD25TJ472	4.7KΩ, 1/2Watt, 5%, Carbon	1	
R203	ERC12GK203	20KΩ, 1/2Watt, 10%, Solid	1	
R204	ERD25TJ102	1KΩ, 1/2Watt, 5%, Carbon	1	
R205	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R206	ERD25TJ103	10KΩ, 1/2Watt, 5%, Carbon	1	
R207	ERD25TJ105	1MΩ, 1/2Watt, 5%, Carbon	1	
R208	ERD25TJ224	220KΩ, 1/2Watt, 5%, Carbon	1	
R209	ERD25TJ220	22Ω, 1/2Watt, 5%, Carbon	1	
R210	ERD25TJ681	680Ω, 1/2Watt, 5%, Carbon	1	

Ref No.	Part No.	Part Name & Description	Per Spd	Remarks	Ref No.	Part No.	Part Name & Description	Per Spd	Remarks
R211	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S	R270	ERD25TJ224	220KN, 1/4 Watt, 15%, Carbon	1	S
R212	ERD25TJ682	68KN, 1/4 Watt, 15%, Carbon	1	S	R271	ERD25TJ221	220KN, 1/4 Watt, 15%, Carbon	1	S
R213	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S	R272	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R214	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R273	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R215	ERD25TJ680	68KN, 1/4 Watt, 15%, Carbon	1	S	R275	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S
R216	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S	R276	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R217	ERD25TJ681	68KN, 1/4 Watt, 15%, Carbon	1	S	R277	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R218	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S	R278	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R219	ERD25TJ472	4.7KN, 1/4 Watt, 15%, Carbon	1	S	R279	ERD25TJ153	15KN, 1/4 Watt, 15%, Carbon	1	S
R220	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S	R280	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R221	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S	R281	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S
R222	ERD25TJ221	220KN, 1/4 Watt, 15%, Carbon	1	S	R282	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R223	ERD25TJ221	220KN, 1/4 Watt, 15%, Carbon	1	S	R283	ERD25TJ473	47KN, 1/4 Watt, 15%, Carbon	1	S
R224	ERD25TJ272	2.7KN, 1/4 Watt, 15%, Carbon	1	S	R284	ERD10TJ100	10KN, 1/4 Watt, 15%, Carbon	1	S
R225	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R301	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R226	ERD25TJ470	47KN, 1/4 Watt, 15%, Carbon	1	S	R302	ERD25TJ332	3.3KN, 1/4 Watt, 15%, Carbon	1	S
R227	ERD25TJ221	220KN, 1/4 Watt, 15%, Carbon	1	S	R303	ERD25TJ334	33KN, 1/4 Watt, 15%, Carbon	1	S
R228	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S	R304	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S
R229	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R305	ERD25TJ332	3.3KN, 1/4 Watt, 15%, Carbon	1	S
R230	ERD25TJ681	68KN, 1/4 Watt, 15%, Carbon	1	S	R307	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R231	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S	R308	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R232	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R309	ERD25TJ152	1.5KN, 1/4 Watt, 15%, Carbon	1	S
R233	ERD25TJ152	1.5KN, 1/4 Watt, 15%, Carbon	1	S	R311	ERD25TJ681	68KN, 1/4 Watt, 15%, Carbon	1	S
R234	ERD25TJ681	68KN, 1/4 Watt, 15%, Carbon	1	S	R312	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R235	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S	R314	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R236	ERD25TJ220	22KN, 1/4 Watt, 15%, Carbon	1	S	R316	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S
R237	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S	R317	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S
R238	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R318	ERD25TJ683	68KN, 1/4 Watt, 15%, Carbon	1	S
R239	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S	R319	ERD25TJ224	220KN, 1/4 Watt, 15%, Carbon	1	S
R240	ERD25TJ331	33KN, 1/4 Watt, 15%, Carbon	1	S	R320	ERD25TJ562	5.6KN, 1/4 Watt, 15%, Carbon	1	S
R241	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S	R321	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S
R242	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R330	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S
R243	ERD25TJ681	68KN, 1/4 Watt, 15%, Carbon	1	S	R331	ERD25TJ473	47KN, 1/4 Watt, 15%, Carbon	1	S
R244	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S	R503	ERD25TJ153	15KN, 1/4 Watt, 15%, Carbon	1	S
R245	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S	R505	ERC12GK103	10KN, 1/4 Watt, 10%, Solid	1	S
R246	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S	R506	ERC12GK103	10KN, 1/4 Watt, 10%, Solid	1	S
R247	ERD25TJ473	47KN, 1/4 Watt, 15%, Carbon	1	S	R507	ERC122GKM335	3.3KN, 1/4 Watt, 10%, Solid	1	S
R248	ERD25TJ472	4.7KN, 1/4 Watt, 15%, Carbon	1	S	R508	ERX2ANJ3R3	3.3KN, 2Watt, 15%, Metal Oxide for USA only	1	S
R249	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S	R701	ERD25TJ680	68KN, 1/4 Watt, 15%, Carbon	1	S
R250	ERD25TJ472	4.7KN, 1/4 Watt, 15%, Carbon	1	S	R702	ERD25TJ153	15KN, 1/4 Watt, 15%, Carbon	1	S
R251	ERD25TJ392	3.9KN, 1/4 Watt, 15%, Carbon	1	S	R703	ERD25TJ222	2.2KN, 1/4 Watt, 15%, Carbon	1	S
R252	ERD25TJ682	68KN, 1/4 Watt, 15%, Carbon	1	S	R704	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S
R254	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S	R705	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S
R255	ERD25TJ333	33KN, 1/4 Watt, 15%, Carbon	1	S	R706	ERD25TJ332	3.3KN, 1/4 Watt, 15%, Carbon	1	S
R256	ERD25TJ473	47KN, 1/4 Watt, 15%, Carbon	1	S	R707	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R257	ERD25TJ474	47KN, 1/4 Watt, 15%, Carbon	1	S	R708	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R258	ERD25TJ102	1KN, 1/4 Watt, 15%, Carbon	1	S	R709	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R259	ERD25TJ471	47KN, 1/4 Watt, 15%, Carbon	1	S	R710	ERD25TJ103	10KN, 1/4 Watt, 15%, Carbon	1	S
R260	ERD25TJ220	22KN, 1/4 Watt, 15%, Carbon	1	S	R801	RRD18XK223	22KN, 1/4 Watt, 10%, Chip	1	S
R261	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S	R802	RRD18XK103	10KN, 1/4 Watt, 10%, Chip	1	S
R262	ERD25TJ683	68KN, 1/4 Watt, 15%, Carbon	1	S	R803	RRD18XK222	2.2KN, 1/4 Watt, 10%, Chip	1	S
R263	ERD25TJ822	8.2KN, 1/4 Watt, 15%, Carbon	1	S	R804	RRD18XK224	220KN, 1/4 Watt, 10%, Chip	1	S
R265	ERD25TJ473	47KN, 1/4 Watt, 15%, Carbon	1	S	R905	FRD25TJ332	3.3KN, 1/4 Watt, 15%, Carbon	1	S
R266	ERD25TJ332	3.3KN, 1/4 Watt, 15%, Carbon	1	S	R907	FRD18XK680	68KN, 1/4 Watt, 10%, Chip	1	S
R267	ERD25TJ684	68KN, 1/4 Watt, 15%, Carbon	1	S	R908	FRD18XK681	68KN, 1/4 Watt, 10%, Chip	1	S
R268	ERD25TJ104	100KN, 1/4 Watt, 15%, Carbon	1	S	R909	FRD25TJ122	1.2KN, 1/4 Watt, 15%, Carbon	1	S
R269	ERD25TJ472	4.7KN, 1/4 Watt, 15%, Carbon	1	S					

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks	Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
R910	ERD25TJ100	10Ω, 1/2Watt, 15%, Carbon	1	S	C45	ECMS05560JH	56PF, 50WV, 15%, Mica	1	
R911	RRD8XK103	10KΩ, 1/2Watt, 10%, Chip	1		C46	ECMS05470JH	47PF, 50WV, 15%, Mica	1	
R912	RRD8XK682	6.8KΩ, 1/2Watt, 10%, Chip	1		C47	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R913	RRD8XK224	220KΩ, 1/2Watt, 10%, Chip	1		C48	ECGD1H223PF	0.022μF, 50WV, 10%, Ceramic	1	
R914	RRD8XK154	150KΩ, 1/2Watt, 10%, Chip	1		C49	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R915	RRD8XK103	10KΩ, 1/2Watt, 10%, Chip	1		C50	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R916	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C51	ECGD1H223PF	0.022μF, 50WV, 10%, Ceramic	1	
R917	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C52	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R918	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C53	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R919	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C54	ECGD1H223PF	0.022μF, 50WV, 10%, Ceramic	1	
R920	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C55	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R921	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C56	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R922	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C57	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
R923	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C58	ECGD1H3R5C	3.5PF, 50WV, 0.25PF, Ceramic	1	
R924	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C59	ECGD1H220KC	22PF, 50WV, 10%, Ceramic	1	
R925	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C60	ECGD1H150KC	15PF, 50WV, 10%, Ceramic	1	
R926	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C61	ECGD1H070DC	7PF, 50WV, 0.5PF, Ceramic	1	
R927	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C62	ECGD1H040C	4PF, 50WV, 0.25PF, Ceramic	1	
R928	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C63	ECMS05101JH	100PF, 50WV, 15%, Mica	1	
R929	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C64	ECMS05680JH	68PF, 50WV, 15%, Mica	1	
R930	RRD8XK104	100KΩ, 1/2Watt, 10%, Chip	1		C65	ECMS05141JH	140PF, 50WV, 15%, Ceramic	1	
R931	RRD8XK222	2.2KΩ, 1/2Watt, 10%, Chip	1		C66	ECMS05141JH	0.01μF, 50WV, 10%, Ceramic	1	
R932	ERD25TJ222	2.2KΩ, 1/2Watt, 15%, Carbon	1	S	C67	ECGD1H103PF	0.01μF, 50WV, 10%, Ceramic	1	
R933	RRD8XK331	330Ω, 1/2Watt, 5%, Chip	1		C68	ECGD1H103PF	0.01μF, 50WV, 10%, Ceramic	1	
R934	RRD25TJ682	6.8KΩ, 1/2Watt, 15%, Carbon	1	S	C69	ECGD1H103PF	0.01μF, 50WV, 10%, Ceramic	1	
R935	ERD25TJ103	10KΩ, 1/2Watt, 15%, Carbon	1	S	C70	ECGD1H470KC	47PF, 50WV, 10%, Ceramic	1	
					C71	ECGD1H820K	82PF, 50WV, 10%, Ceramic	1	
					C72	ECGD1H103MD	0.01μF, 50WV, 20%, Ceramic	1	
					C73	ECGD1H330KC	33PF, 50WV, 10%, Ceramic	1	
					C74	ECGD1H103PF	0.01μF, 50WV, 10%, Ceramic	1	
					C75	ECMS05470JH	47PF, 50WV, 15%, Ceramic	1	
					C76	ECMS05101JH	100PF, 50WV, 15%, Mica	1	
					C77	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C78	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C79	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C80	ECMS05101JH	0.022μF, 50WV, 10%, Ceramic	1	
					C81	ECMS05101JH	33PF, 50WV, 10%, Ceramic	1	
					C82	ECMS05101JH	33PF, 50WV, 10%, Ceramic	1	
					C83	ECMS05101JH	68PF, 50WV, 15%, Mica	1	
					C84	ECMS05121JH	120PF, 50WV, 15%, Mica	1	
					C85	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C86	ECMS05101JH	18PF, 50WV, 10%, Ceramic	1	
					C87	ECMS05101JH	39PF, 50WV, 10%, Ceramic	1	
					C88	ECMS05101JH	2.5PF, 50WV, 0.25PF, Ceramic	1	
					C89	ECMS05101JH	15PF, 50WV, 10%, Ceramic	1	
					C90	ECMS05101JH	0.01μF, 50WV, 20%, Ceramic	1	
					C91	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C92	ECMS05101JH	22PF, 50WV, 10%, Ceramic	1	
					C93	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C94	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C95	ECMS05101JH	470μF, 16WV, Electrolytic	1	
					C96	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C97	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C98	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C99	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C100	ECMS05101JH	10PF, 50WV, 10%, Ceramic	1	
					C101	ECMS05101JH	4PF, 50WV, 0.25PF, Ceramic	1	
					C102	ECMS05101JH	0.01μF, 50WV, 20%, Ceramic	1	
					C103	ECMS05101JH	7PF, 50WV, 0.5PF, Ceramic	1	
					C104	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C105	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C106	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C107	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C108	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C109	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C110	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	
					C111	ECMS05101JH	0.01μF, 50WV, 10%, Ceramic	1	

CAPACITORS



C2	ECMS05182JZ	10μF, 50WV, Electrolytic	1	
C3	ECMS05182JZ	1800PF, 50WV, 15%, Styrol	1	
C4	ECMS05181JH	180PF, 50WV, 15%, Mica	1	
C5	ECMS05101JH	100PF, 50WV, 15%, Mica	1	
C6	ECMS05203JH	82PF, 50WV, 15%, Mica	1	
C7	ECMS05680JH	68PF, 50WV, 15%, Mica	1	
C8	ECMS05560JH	56PF, 50WV, 15%, Mica	1	
C9	ECMS05470JH	47PF, 50WV, 15%, Mica	1	
C19	ECMS051070DC	7PF, 50WV, 0.5PF, Ceramic	1	
C20	ECMS051120KC	12PF, 50WV, 10%, Ceramic	1	
C21	ECMS051130KC	33PF, 50WV, 10%, Ceramic	1	
C23	ECMS051560K	56PF, 50WV, 10%, Ceramic	1	
C24	ECMS051102MD	0.001μF, 50WV, 20%, Ceramic	1	
C22	ECMS051180KC	18PF, 50WV, 10%, Ceramic	1	
C25	ECMS051223PF	0.022μF, 50WV, 10%, Ceramic	1	
C26	ECMS051223PF	0.022μF, 50WV, 10%, Ceramic	1	
C28	ECMS051050CC	5PF, 50WV, 0.25PF, Ceramic	1	
C29	ECMS051390KC	39PF, 50WV, 10%, Ceramic	1	
C30	ECMS051330KC	33PF, 50WV, 10%, Ceramic	1	
C31	ECMS051390KC	39PF, 50WV, 10%, Ceramic	1	
C32	ECMS051560K	56PF, 50WV, 10%, Ceramic	1	
C40	ECMS05182JZ	1800PF, 50PF, 15%, Styrol	1	
C41	ECMS05181JH	180PF, 50WV, 15%, Mica	1	
C42	ECMS05101JH	100PF, 50WV, 15%, Mica	1	
C43	ECMS05680JH	68PF, 50WV, 15%, Mica	1	
C44	ECMS05560JH	56PF, 50WV, 15%, Mica	1	

Ref No	Part No.	Part Name & Description	Per Set	Remarks
C112	ECMS05181JH	180PF, 50WV, ±5%, Mica	1	
C113	ECFVD1H223MD	0.0022μF, 50WV, ±20%, Ceramic	1	
C114	ECFVD1H103PF	100PF, 50WV, ±10%, Ceramic	1	
C115	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C116	ECFVD1H470KC	47PF, 50WV, ±10%, Ceramic	1	
C117	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C118	ECFVD1H030C	3PF, 50WV, ±0.25PF, Ceramic	1	
C119	ECFVD1H050CC	5PF, 50WV, ±0.25PF, Ceramic	1	
C120	ECFVD1H180KC	18PF, 50WV, ±10%, Ceramic	1	
C121	ECFVD1H100KC	100PF, 50WV, ±10%, Ceramic	1	
C122	ECFVD1H223MD	0.022μF, 50WV, ±20%, Ceramic	1	
C123	ECFVD1H103MD	0.01μF, 50WV, ±20%, Ceramic	1	
C125	ECFVD1H040C	4PF, 50WV, ±0.25PF, Ceramic	1	
C126	ECFVD1H100KC	10PF, 50WV, ±10%, Ceramic	1	
C127	ECFVD1H100KC	10PF, 50WV, ±10%, Ceramic	1	
C128	ECFVD1H220KC	22PF, 50WV, ±10%, Ceramic	1	
C129	ECFVD1H070DC	7PF, 50WV, ±0.5PF, Ceramic	1	
C130	ECFVD1H330KC	33PF, 50WV, ±10%, Ceramic	1	
C131	ECFVD1H100KC	10PF, 50WV, ±10%, Ceramic	1	
C202	ECMS05221JZ	220PF, 50WV, ±5%, Styrol	1	
C203	ECMS05221JZ	220PF, 50WV, ±5%, Styrol	1	
C204	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C205	ECFVD1H103PF	103PF, 50WV, ±10%, Ceramic	1	
C206	ECFVD1H270KC	27PF, 50WV, ±10%, Ceramic	1	
C208	ECFVD1H100KC	10PF, 50WV, ±10%, Ceramic	1	
C209	ECFVD1H020C	2PF, 50WV, ±0.25PF, Ceramic	1	
C210	ECFVD1H102PF	0.001μF, 50WV, ±10%, Ceramic	1	
C211	ECFVD1H102PF	0.001μF, 50WV, ±10%, Ceramic	1	
C212	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C213	ECMS05122JZ	120PF, 50WV, ±5%, Styrol	1	
C215	ECMS05181JH	180PF, 50WV, ±5%, Mica	1	
C220	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C223	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C224	ECFVD1H120KC	12PF, 50WV, ±10%, Ceramic	1	
C225	ECMS05131JH	130PF, 50WV, ±5%, Mica	1	
C226	ECMS05392KZ	3900PF, 50WV, ±10%, Styrol	1	
C228	ECFVD1H180KC	18PF, 50WV, ±10%, Ceramic	1	
C230	ECFVD1H390KC	39PF, 50WV, ±10%, Ceramic	1	
C231	ECFVD1H030C	3PF, 50WV, ±0.25PF, Ceramic	1	
C232	ECFVD1H102MD	0.001μF, 50WV, ±20%, Ceramic	1	
C233	ECFVD1H020C	2PF, 50WV, ±0.25PF, Ceramic	1	
C234	ECFVD1H050CC	5PF, 50WV, ±0.25PF, Ceramic	1	
C235	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C236	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C237	ECFVD1H103PF	103PF, 50WV, ±10%, Ceramic	1	
C238	ECFVD1H070DC	7PF, 50WV, ±0.5PF, Ceramic	1	
C239	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C240	ECFVD1H103PF	750PF, 50WV, ±5%, Styrol	1	
C241	ECFVD1H223MD	0.022μF, 50WV, ±20%, Ceramic	1	
C242	ECFVD1H050CC	5PF, 50WV, ±0.25PF, Ceramic	1	
C243	ECFVD1H102PF	0.01μF, 50WV, ±10%, Ceramic	1	
C244	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C245	ECFVD1H030C	1μF, 100WV, Electrolytic	1	
C246	ECFVD1H103MD	0.01μF, 50WV, ±20%, Ceramic	1	
C247	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C248	ECFVD1H223MD	0.022μF, 50WV, ±20%, Ceramic	1	
C249	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C250	ECFVD1H223MD	0.022μF, 25WV, ±20%, Semi-Conductor	1	
C251	ECFVD1H270KC	27PF, 50WV, ±10%, Ceramic	1	
C252	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C253	ECFVD1H103PF	10μF, 50WV, Electrolytic	1	
C254	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C255	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C256	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C257	ECFVD1H223MD	0.022μF, 25WV, ±20%, Semi-Conductor	1	
C258	ECFVD1H103PF	47μF, 10WV, Electrolytic	1	
C259	ECFVD1H100KC	10PF, 50WV, ±10%, Ceramic	1	
C260	ECFVD1H103PF	47μF, 63WV, Electrolytic	1	
C261	ECFVD1H390KC	39PF, 50WV, ±10%, Ceramic	1	
C262	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C263	ECFVD1H223PF	33PF, 16WV, Electrolytic	1	
C264	ECFVD1H103PF	0.022μF, 50WV, ±10%, Ceramic	1	
C265	ECFVD1H470KC	47PF, 50WV, ±10%, Ceramic	1	
C266	ECFVD1H120KC	12PF, 50WV, ±10%, Ceramic	1	
C267	ECFVD1H100KC	10μF, 50WV, Electrolytic	1	
C268	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C269	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C270	ECFVD1H472MD	0.0047μF, 50WV, ±20%, Ceramic	1	
C271	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C272	ECFVD1H103MD	0.01μF, 25WV, ±20%, Semi-Conductor	1	
C273	ECMS05121JH	120PF, 50WV, ±5%, Mica	1	
C274	ECMS05161JH	160PF, 50WV, ±5%, Mica	1	
C275	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C276	ECFVD1H223PF	0.022μF, 10WV, Electrolytic	1	
C277	ECFVD1H682MD	0.0068μF, 50WV, ±20%, Ceramic	1	
C278	ECFVD1H103MD	0.022μF, 25WV, ±20%, Ceramic	1	
C279	ECFVD1H103MD	0.01μF, 50WV, ±20%, Ceramic	1	
C280	ECFVD1H103MD	0.01μF, 50WV, ±20%, Ceramic	1	
C281	ECFVD1H103MD	47μF, 63WV, Electrolytic	1	
C282	ECFVD1H180KC	18PF, 50WV, ±10%, Ceramic	1	
C283	ECFVD1H33MD	0.033μF, 25WV, ±20%, Semi-Conductor	1	
C284	ECFVD1H682MD	0.0068μF, 50WV, ±20%, Ceramic	1	
C285	ECFVD1H34R7	4.7μF, 63WV, Electrolytic	1	
C286	ECFVD1H223MD	0.022μF, 25WV, ±20%, Semi-Conductor	1	
C287	ECFVD1H470KC	47PF, 50WV, ±10%, Ceramic	1	
C288	ECFVD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	
C289	ECFVD1H270KC	27PF, 50WV, ±10%, Ceramic	1	
C290	ECFVD1H223PF	2.2μF, 100WV, Electrolytic	1	
C291	ECFVD1H330KC	33PF, 50WV, ±10%, Ceramic	1	
C292	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C293	ECFVD1H330KC	33PF, 50WV, ±10%, Ceramic	1	
C294	ECFVD1H223PF	0.022μF, 50WV, ±10%, Ceramic	1	
C295	ECFVD1H102MD	0.001μF, 50WV, ±20%, Ceramic	1	
C296	ECFVD1H102MD	0.01μF, 50WV, ±20%, Ceramic	1	
C297	ECFVD1H331K	330PF, 50WV, ±10%, Ceramic	1	
C301	ECFVD1H331K	0.1μF, 50WV, Electrolytic	1	
C302	ECFVD1H331K	0.1μF, 50WV, Electrolytic	1	
C303	ECFVD1H331K	330PF, 50WV, ±10%, Ceramic	1	
C304	ECFVD1H331K	1μF, 100WV, Electrolytic	1	
C305	ECFVD1H331K	0.022μF, 25WV, ±20%, Semi-Conductor	1	
C306	ECFVD1H331K	0.0033μF, 50WV, ±20%, Ceramic	1	
C307	ECFVD1H331K	0.22μF, 50WV, Electrolytic	1	
C308	ECFVD1H331K	100μF, 10WV, Electrolytic	1	
C309	ECFVD1H331K	0.0068μF, 50WV, ±20%, Ceramic	1	

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks	Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
C310	ECBA502R22	0.22μF, 50WV, Electrolytic	1	S	C950	ECBA1HS100	10μF, 50WV, Electrolytic	1	S
C311	ECBA502H22	0.22μF, 50WV, Electrolytic	1	S	C951	ECFVD223MD	0.022μF, 25WV, ±20%, Seal-Conductor	1	S
C312	ECBA1JSAR7	4.7μF, 63WV, Electrolytic	1	S	C952	ECBD1H470KB	47PF, 50WV, ±10%, Ceramic	1	S
C313	ECFVD103MD	0.01μF, 25WV, ±20%, Seal-Conductor	1	S	C953	ECBD1H470KB	47PF, 50WV, ±10%, Ceramic	1	S
C314	ECBA1AS221	220μF, 10WV, Electrolytic	1	S	C954	ECBD1H470KB	47PF, 50WV, ±10%, Ceramic	1	S
C315	ECBA1HS100	10μF, 50WV, Electrolytic	1	S	C955	ECFVD104MD	0.1μF, 25WV, ±20%, Seal-Conductor	1	S
C316	ECF16R682SW	6800μF, 16WV, Electrolytic	1	S	C956	ECBX1H820KC	A2PF, 50WV, ±10%, Chip	1	S
C317	ECBD1H220KC	22PF, 50WV, ±10%, Ceramic	1	S	C957	ECBD1H331K	330PF, 50WV, ±10%, Ceramic	1	S
C319	ECFVD104MD	0.1μF, 25WV, ±20%, Seal-Conductor	1	S	CABINET				
C320	ECBD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	S	K1	RYFP4900M	Front Panel Assembly	1	S
C321	ECBD1H103PF	0.01μF, 50WV, ±10%, Ceramic	1	S	K2	RYEP4900M	Indicating Plate Assembly	1	S
C322	ECBA1CS330	33μF, 16WV, Electrolytic	1	S		RWBX4800N	Battery Case Assembly	1	S
C323	ECBA1AS470	47μF, 10WV, Electrolytic	1	S		RJC505Z	Terminal Spring, Battery - Side	4	S
C324	ECBD1H102MD	0.001μF, 50WV, ±20%, Ceramic	1	S		RJC111A	Connecting Pipe, Terminal Spring	4	S
C325	ECBA1CS471	470μF, 16WV, Electrolytic	1	S	K3	RYTF4900LBSX	Knob Assembly SW2-8 Tuning	1	S
C326	ECBA2AS010	1μF, 100WV, Electrolytic	1	S	K4	RYTJ2X4800N	Knob Assembly, SW1/MW/PW Tuning	1	S
C327	ECBA1HS100	10μF, 50WV, Electrolytic	1	S	K5	TKF367Z	Cabinet Cover	1	S
C328	ECBD1H332MD	0.0033μF, 50WV, ±20%, Ceramic	1	S	K6	RKH5076Y	Handle, Cabinet	1	S
C329	ECBD1H221K	220PF, 50WV, ±10%, Ceramic	1	S	K7	RKX125Z	Gover Handle	2	S
C330	ECFVD683MD	0.068μF, 25WV, ±20%, Seal-Conductor	1	S	K8	RHG886Y	Rubber Cushion, Speaker	1	S
C331	ECBD1H103MD	0.01μF, 50WV, ±20%, Ceramic	1	S	K9	RBS1032K	Knob, Band Selector	1	S
C332	ECBD1H070DC	7PF, 50WV, 0.5PF, Ceramic	1	S	K10	RBE15Y	Knob, Power	1	S
C333	ECBD1H010C	1PF, 50WV, 0.25PF, Ceramic	1	S		RBN381Z	Ant. Trim & AM R.P. Gain	6	S
C334	ECBD1H010C	1PF, 50WV, 0.25PF, Ceramic	1	S	K11	RKU267T	Rear Panel	1	S
C335	ECBD1H00KC	10PF, 50WV, ±10%, Ceramic	1	S	K12	RGT663X	Name Plate	1	S
C336	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S	K13	RHG309C	Rubber Leg (Large), Cabinet	2	S
C337	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S	K14	RHG325Z	Rubber Leg (Small), Cabinet	2	S
C338	ECBD1H03ZF	0.01μF, 50WV, ±8%, Ceramic	1	S	K15	RKK92Z	Cover, Battery Compartment	2	S
C339	ECBD1H03ZF	0.01μF, 50WV, ±8%, Ceramic	1	S	K16	RJF1065Z	Terminal, EXT. ANT.	3	S
C340	ECBD1H03ZF	0.01μF, 50WV, ±8%, Ceramic	1	S	K17	RJF2002Z	Terminal Board, EXT. ANT.	3	S
C341	ECBD1H03ZF	0.01μF, 50WV, ±8%, Ceramic	1	S	K18	RJS258Y	Socket, SW ANT.	1	S
C342	ECBD1H02MD	0.001μF, 50WV, ±20%, Ceramic	1	S	K19	SMA205	Holder, Core Antenna	1	S
C343	ECIX1H330KC	33PF, 50WV, ±10%, Chip	1	S	K20	SMA207	Holder, Core Antenna	1	S
C344	ECIX1H01KD	100PF, 50WV, ±10%, Chip	1	S		RBE4Y	Knob, SW2-8 Cal.	1	S
C345	ECIX1H02ZF	0.01μF, 50WV, ±8%, Chip	1	S	K21	RHE5005A-8	Screw, Knob M'lg	15	S
C346	ECIX1H02ZF	0.01μF, 50WV, ±8%, Chip	1	S	K22	XSB318BVS	Screw, Cabinet Cover M'lg	8	S
C347	ECIX1H02ZF	0.01μF, 50WV, ±8%, Chip	1	S	K23	XSN318S	Screw, Cabinet Cover M'lg	4	S
C348	ECIX1H02ZF	0.01μF, 50WV, ±8%, Chip	1	S		XYN41C16S	Screw, Handle M'lg	4	S
C349	ECBA2AS2R2	2.2μF, 100WV, Electrolytic	1	S	CHASSIS				
C350	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S	E1	RAD5-BT-11	Display	1	S
C351	ECBA01S102	1000μF, 6.3WV, Electrolytic	1	S	E2	RSQ92S	Dial Mechanism Assembly	1	S
C352	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S	E3	ESR307F35A	Shaft, Switch (SW2-8)	1	S
C353	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S	E4	RMG171Y	Shield Plate, ICI	1	S
C354	ECBA2AS3R3	3.3μF, 100WV, Electrolytic	1	S	E5	RHE37Z	Joint, Tuning Capacitor, Switch Shaft	2	S
C355	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S	E6	XSN316S	Screw, Joint M'lg	8	S
C356	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C357	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C358	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C359	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C360	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C361	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C362	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C363	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C364	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C365	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C366	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C367	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C368	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C369	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C370	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C371	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C372	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C373	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C374	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C375	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C376	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C377	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C378	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C379	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C380	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C381	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C382	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C383	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C384	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C385	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C386	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C387	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C388	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C389	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C390	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C391	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C392	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C393	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C394	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C395	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C396	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C397	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C398	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C399	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C400	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C401	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C402	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C403	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C404	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C405	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C406	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C407	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C408	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C409	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C410	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C411	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C412	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C413	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C414	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C415	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C416	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C417	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C418	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C419	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C420	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C421	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C422	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C423	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C424	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C425	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C426	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C427	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C428	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C429	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C430	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C431	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C432	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C433	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C434	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C435	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C436	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C437	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C438	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C439	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C440	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C441	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C442	ECBS05271JZ	270μF, 50WV, ±5%, Styrol	1	S					
C443	ECIX1H680KC	68PF, 50WV, ±10%, Chip	1	S					
C444	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C445	ECIX1H223ZF	0.022μF, 50WV, ±8%, Chip	1	S					
C446	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C447	ECBA01S471	470μF, 6.3WV, Electrolytic	1	S					
C448	ECBA1VS330	33μF, 35WV, Electrolytic	1	S					
C449	ECIX1H223MD	0.022μF, 50WV, ±20%, Chip	1	S					
C450	ECBD1H01K	100PF, 50WV, ±10%, Ceramic	1	S					
C451	ECBS05271JZ	270PF, 50WV, ±5%, Styrol	1	S					
C452	ECBS05271JZ	270μF, 50WV, ±5%,							


Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
PACKING MATERIALS				
P1	XZB70 × 55A04	Polyethylene Cover	1	
P2	RPN2525Z	Pad	1	
P3	RPN1758Z	Pad	2	
P4	RPG1995Y	Packing Case, for USA	1	
P5	RPN9237Z	Packing Case, for Canada	1	
P6	RQX6350Z	Pad Complete	1	
P6	RQX6368Z	Instruction Book, for USA	1	
P6	RQX9154Z	Instruction Book, for Canada	1	
P6	RQX9158Z	SW Manual, for USA	1	
P6	RQX9158Z	SW Manual, for Canada	1	

PACKING MATERIALS & ACCESSORIES



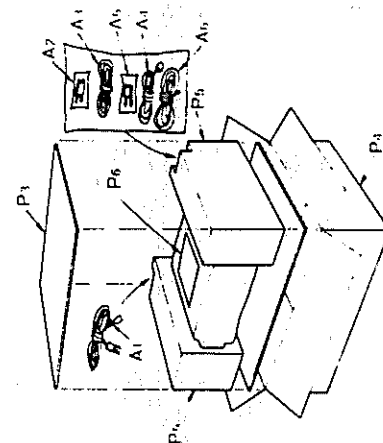
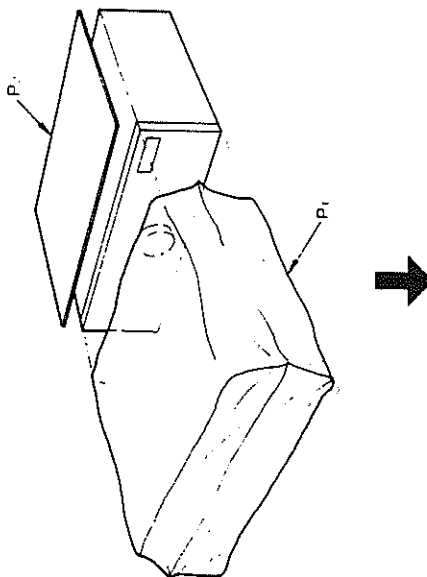


Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
E7	RJ187Y	Jack, Rec. Out & EXT EP, SP	2	
E8	RJ182Z	Jack, Aux	1	
E9	RJ122Z	Jack, AC IN	1	
E10	RJ104Z	Jack, DC IN	1	
E11	XMR48S100A	Pilot Lamp, 12V, 40mA	2	
E12	XMR48S250A	Pilot Lamp, 12V, 40mA	1	
E13	RJ9091Z	Shaft, Tuning	1	
E14	RJ139Z	Bracket, Dial Scale	2	
E15	RJ140Y	Bracket, Dial Scale	2	
E16	RJR20-3	Pulley (Small), Dial	7	
E17	RJR23-1	Pulley (Large), Dial	4	
E18	RJ150-2	Washer, Pulley	11	
E19	RJ603ZK	Shaft, SW2-8 Switch	1	
E20	RJ2622Z	Meter, Tune/Battery	1	
E21	ESA23407	Shaft, Switch	1	
E22	ESA20813B	Wire, Switch	1	
E23	RJ456U	Scale, SW2-8	1	
E24	RJ455X	Scale, SW1/MW/FM	1	
E25	RJ170Z	Pointer, Dial	2	
E26	RJ4012Z	Drum, Dial (SW1/MW/FM)	1	
E27	RJ441Z	Drum, Dial (SW2-8)	1	
E28	RJ05Z	Cord, Dial	1 Roll	
E29	RJ4060A	Spring, Drum (RDD4012Z)	1	
E30	RJ3090A	Spring, Drum (RDD441Z)	1	
E31	RJ17Z	Knob, Switch	6	
E32	RJ171Z	Plug (8P), CP3	1	
E33	RJ137Z	Plug (3P), CPL 2.6, 8, 10, 14, 16, 17	8	
E34	RJ116Z	Plug (5P), CP5, 9, 901	3	
E35	RJ119Z	Plug (7P), CP11	1	
E36	RJ142Z	Plug (6P), CP12	1	
E37	RJ107Z	Plug (4P), CP13, 15, TM901, 902	4	
E38	RJ217Y-X	Socket (5P), CP5, 9, 901	3	
E39	RJ253Y-X	Socket (3P), CPL 2.6, 8, 10, 14, 16, 17	8	
E40	RJ216Y-X	Socket (4P), CP13, 15, 19	3	
E41	RJ112Y-X	Socket (6P), CP12	1	
E42	RJ219Y-X	Socket (7P), CP11	1	
E43	RJ264Y-X	Socket (8P), CP3	1	
E44	RJ1462Z-X	Terminal, Socket	69	
E45	RJ482Z	Cover, AC IN Jack	1	
E46	XN9FZ	Nut, SW Switch Shaft & Ant. Trim M'lg	2	
E47	XN38	Nut, Volume Bass, Treble & etc. M'lg	7	
E48	RJ555A	Terminal, MW/SW1, SW2-8 EXT. Ant	2	
	RJ556A	Terminal, FM EXT. Ant.	1	
ACCESSORIES				
A1	RJ422Y	Power Cord, AC	1	
A2	RJF97Z	Plug, SW2-8 Antenna	1	
A3	RS205Z	FM Antenna	1	
A4	XE1A1-P	Magnetic Earphone	1	
A5	RJ169Z	Plug, Headphone	1	
A6	WR101000bb	Lead Wire, Antenna	1	

Circuit Board Wiring V






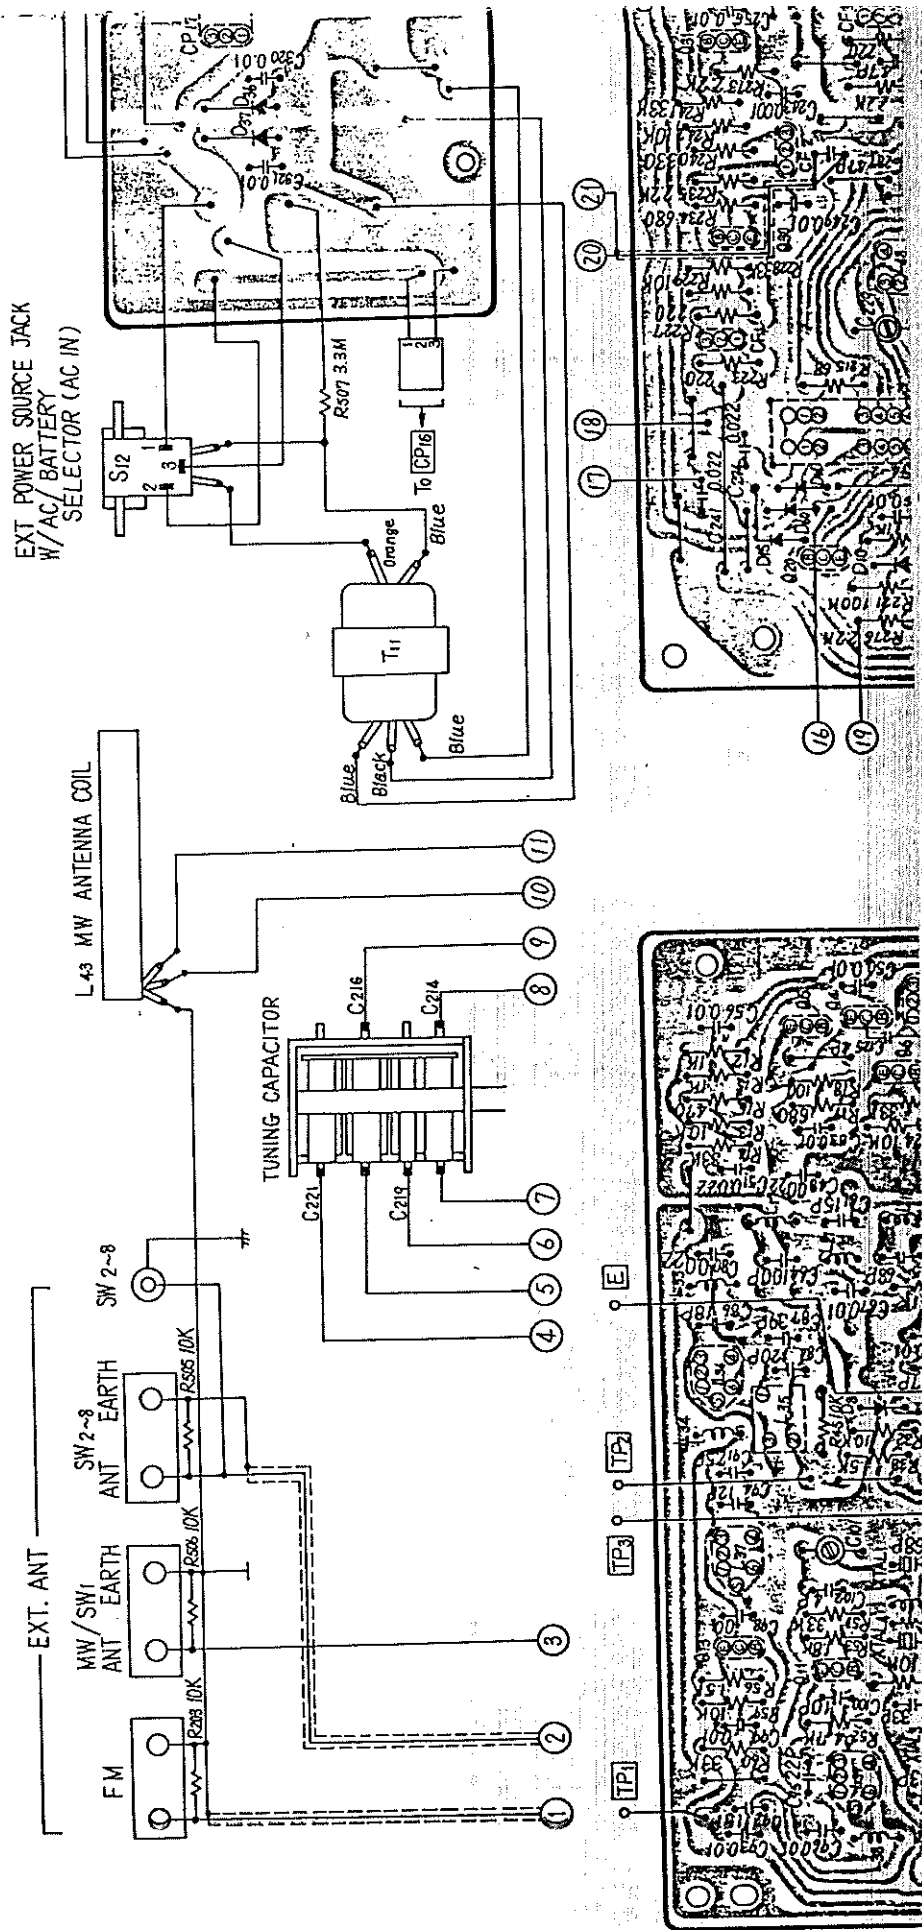


iew - Model RF-4900/©

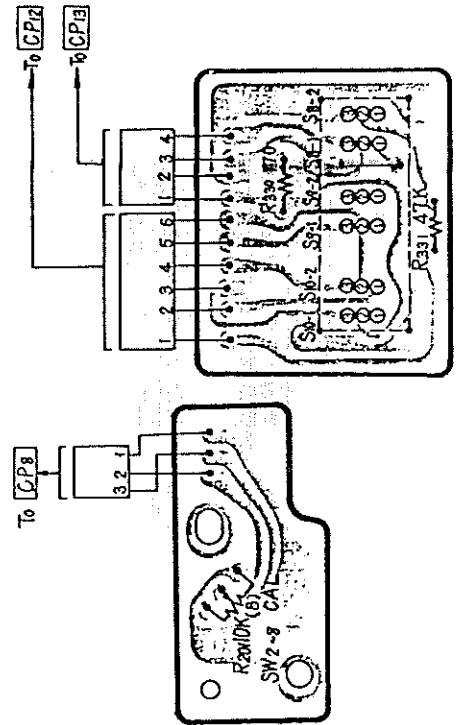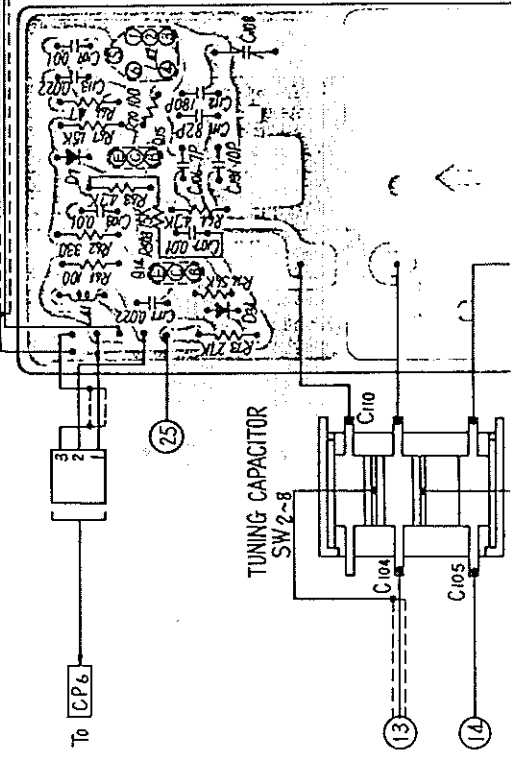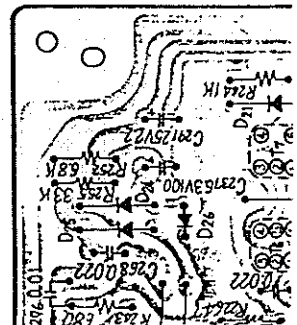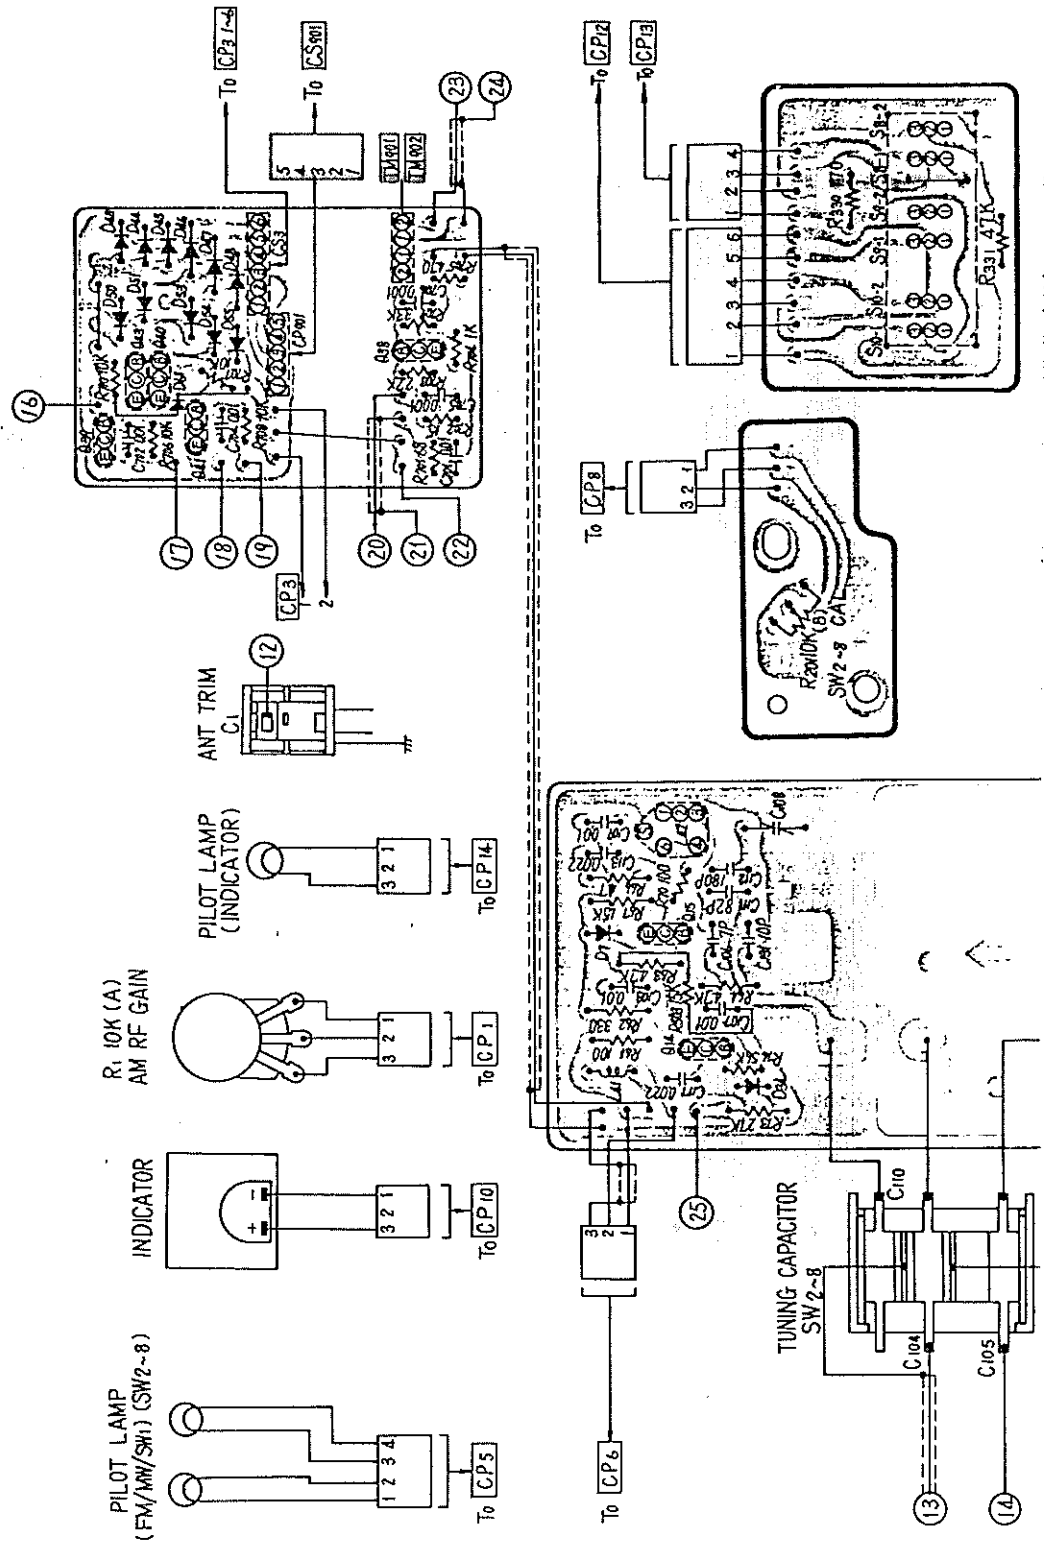



Schematic Diagram


Q₁ 2SK49 SW RF AMP
Q_{1,2} 2SA838 2SA838 SW RF AMP
Q_{1,3} 2SA838 2SA838 SW MIX
Q_{1,4} 2SA838 2SA838 BUFFER

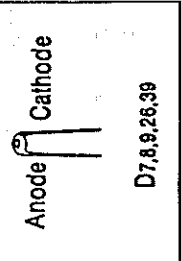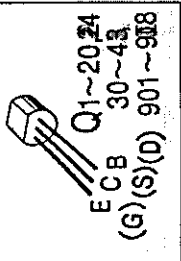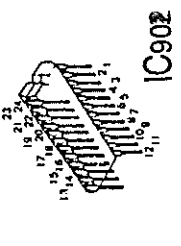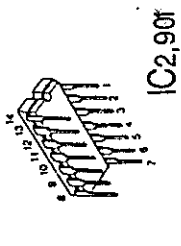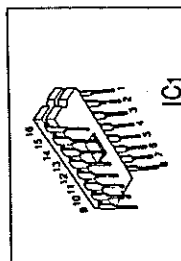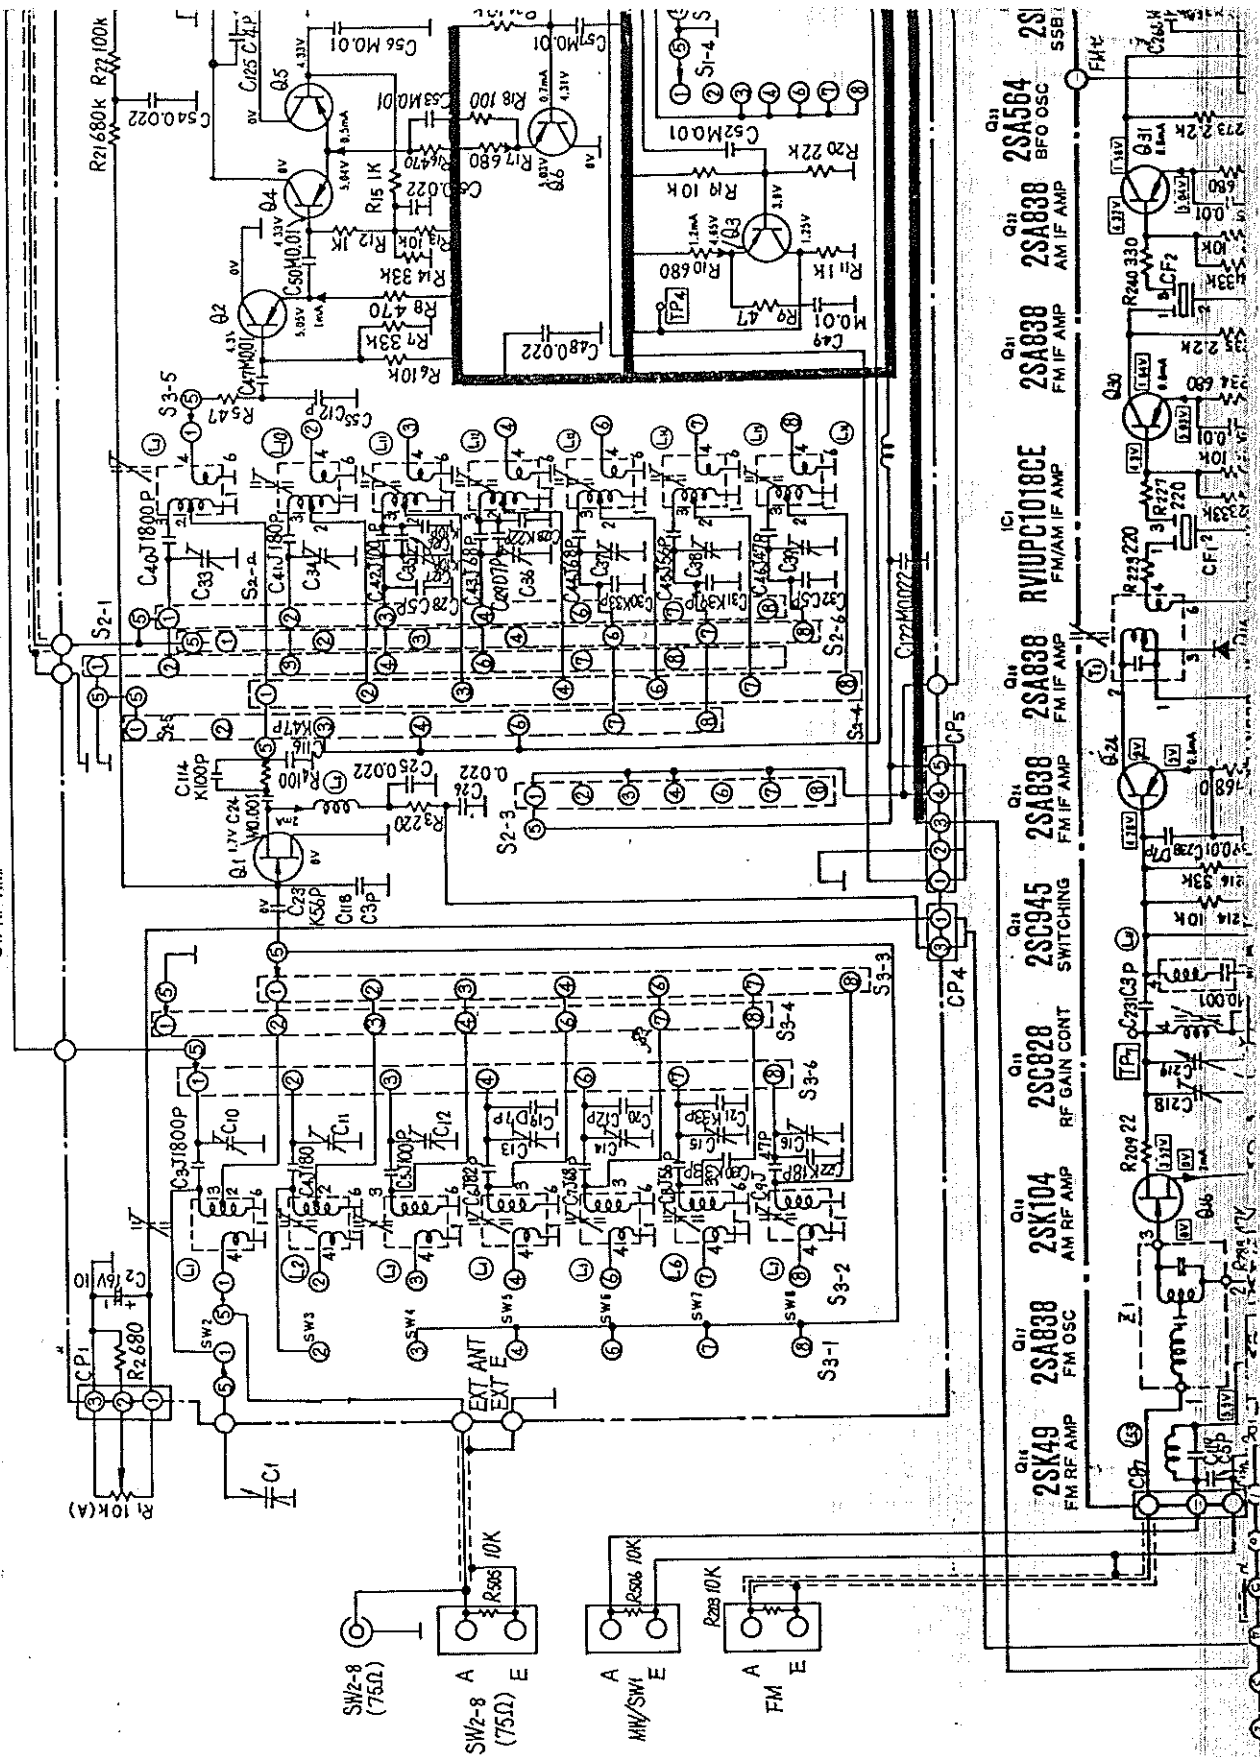

Model RF-4900/©

2SC1675 OSC 2SC1675 OSC 2SC1675 OSC 2SA838 2ND PRE MIX 2SC1675 OSC 2SC1847 REGULATOR 2SA838 1ST PRE AMP 2SA838 BUFFER 2SA838 VFO OSC

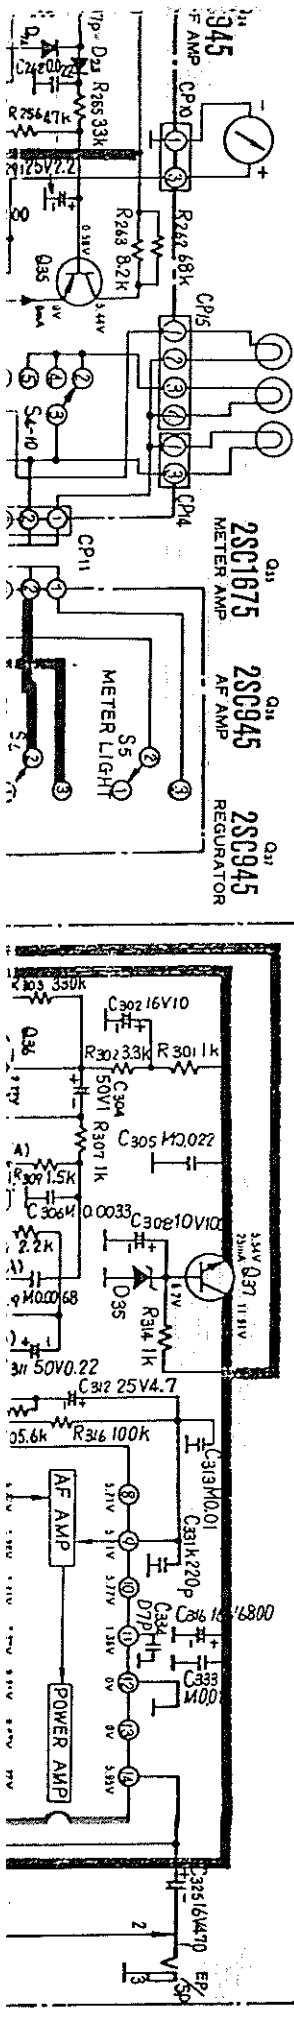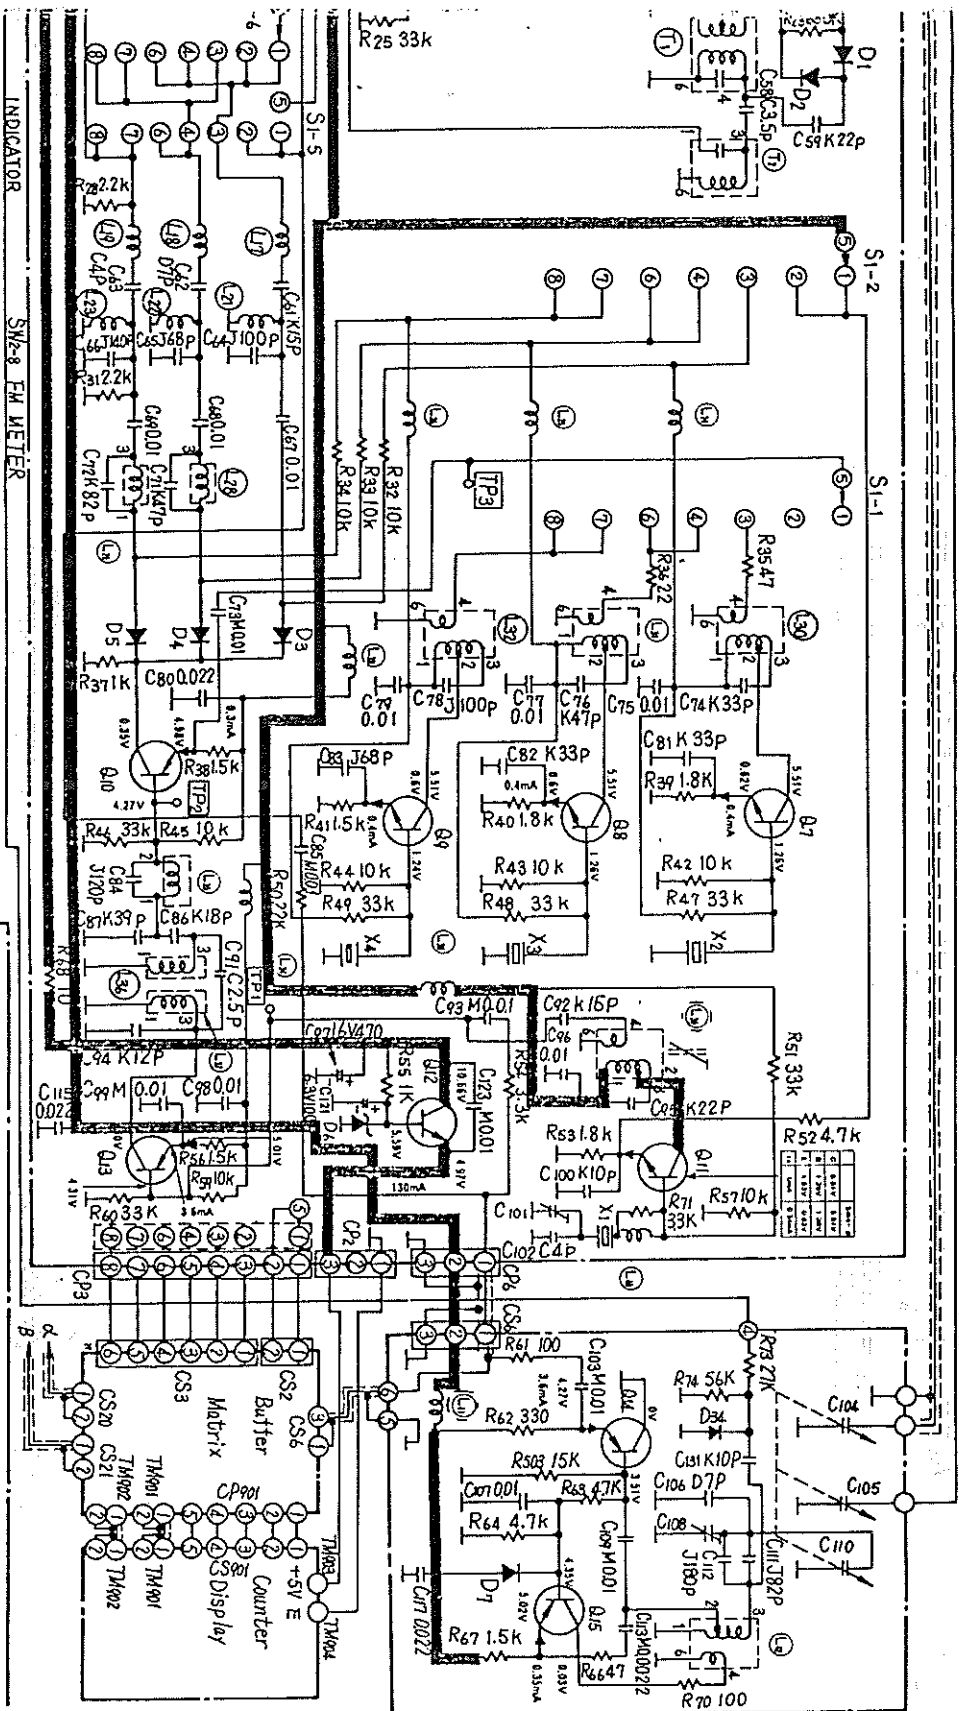

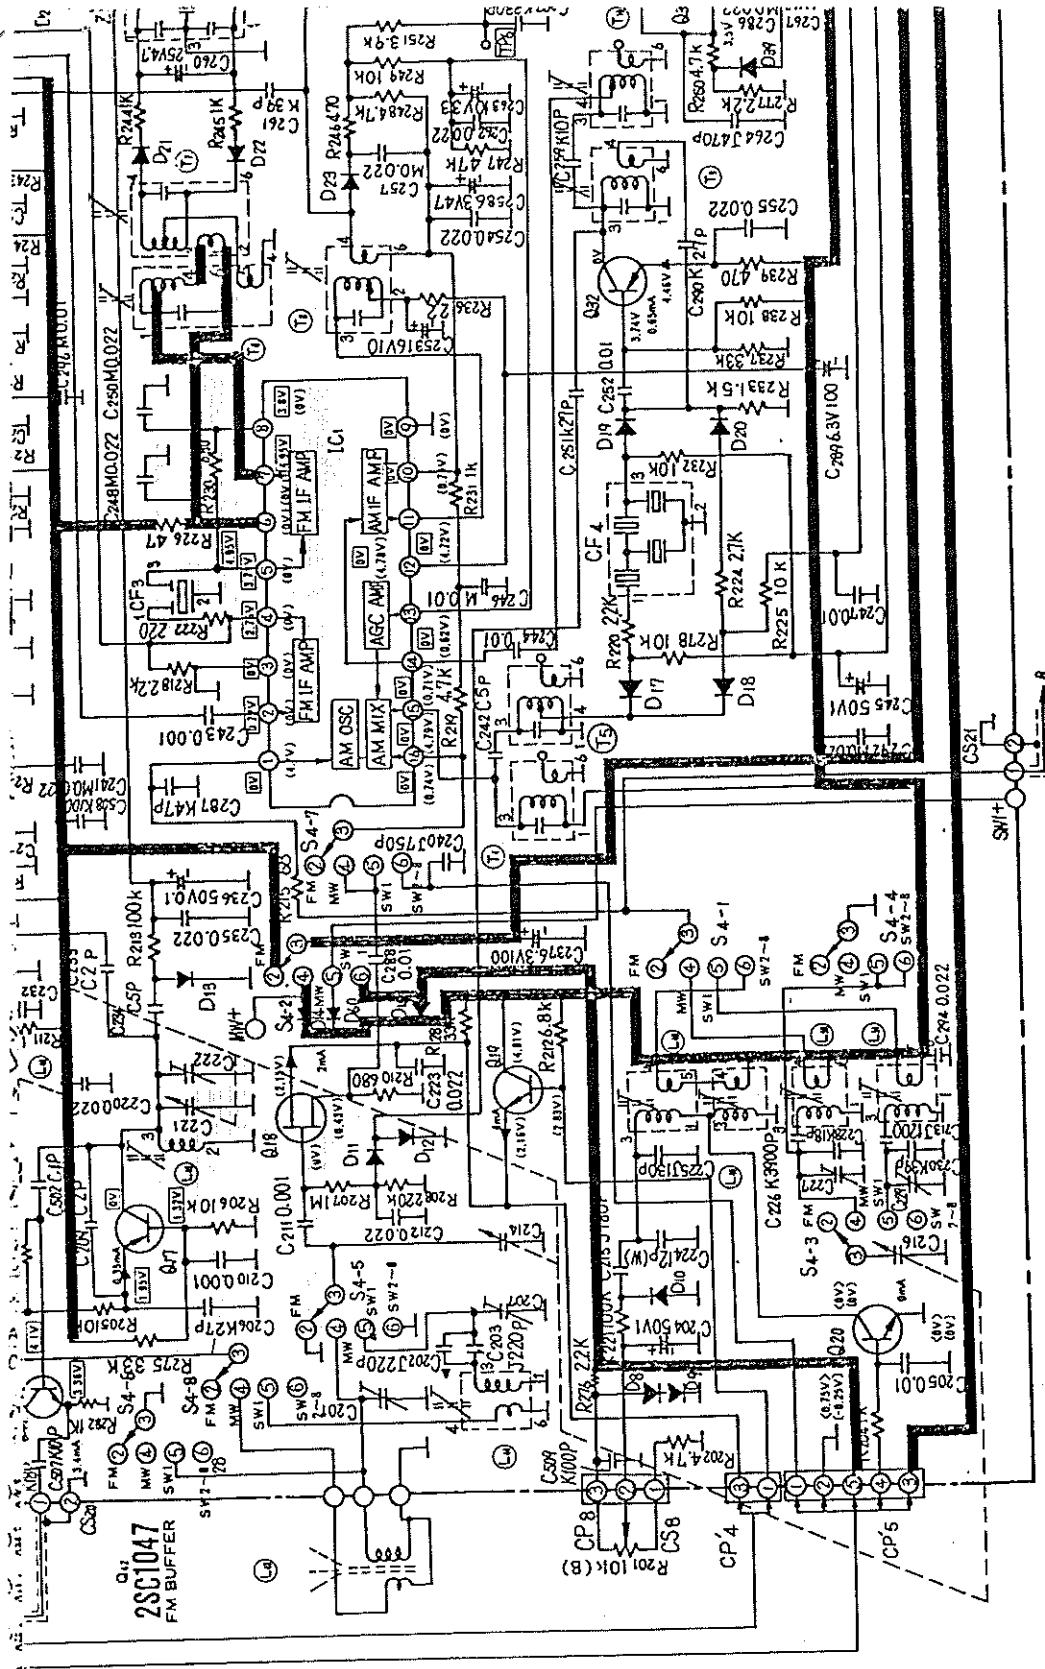


IMPORTANT SAFETY
THE SHADED AREA ON THIS
INCORPORATES SPECIAL
FOR SAFETY.
WHEN SERVICING IT IS ES-
MANUFACTURER'S SPECIFIC
THE CRITICAL COMPONENT
AREAS OF THE SCHEMATIC.

10. S12: AC-BATTERY selector in "BATTERY" position.
11. DC voltage measurements are taken with circuit tester
10ka/V from negative side of batteries.
□ FM position, () MW, SW position.
() SW2 position, [] SW3 position.
Q7...SW4, Q8...SW6, Q9...SW7, Q10...CW/SSB,
Q11, 15, 37...SW2~8
12. Battery current: No signal 45mA
Maximum output 600mA

- Notes:**
1. S1~S3: Band switch (SW2~8) in "SW2" position.
2. S4~S10: Band switch (SW2~8, SW1, MW, FM)
in "FM" position.
3. S6: Light switch in "OFF" position.
4. S7: Digital display switch in "OFF" position.
5. S7: Indicator switch in "SIGNAL" position.
6. S8~S11: FM AFC/Band Width switch in "WIDTH"
"AFC" position.
7. S9: AM ANL switch in "OFF" position.
8. S10~S11: AM mode switch in "AM" position.
9. S11: Power switch in "OFF" position.

Anode	D3~6, 10, 13
	14, 15, 17~
	20, 29, 30
	35~38, 40~48
	50, 51, 53, 54, 55
	60, 61, 902, 903
Cathode	D1, 2, 11, 12, 16, 23
	24, 25, 27, 28
Anode	D21, 22, 31, 32, 33, 34

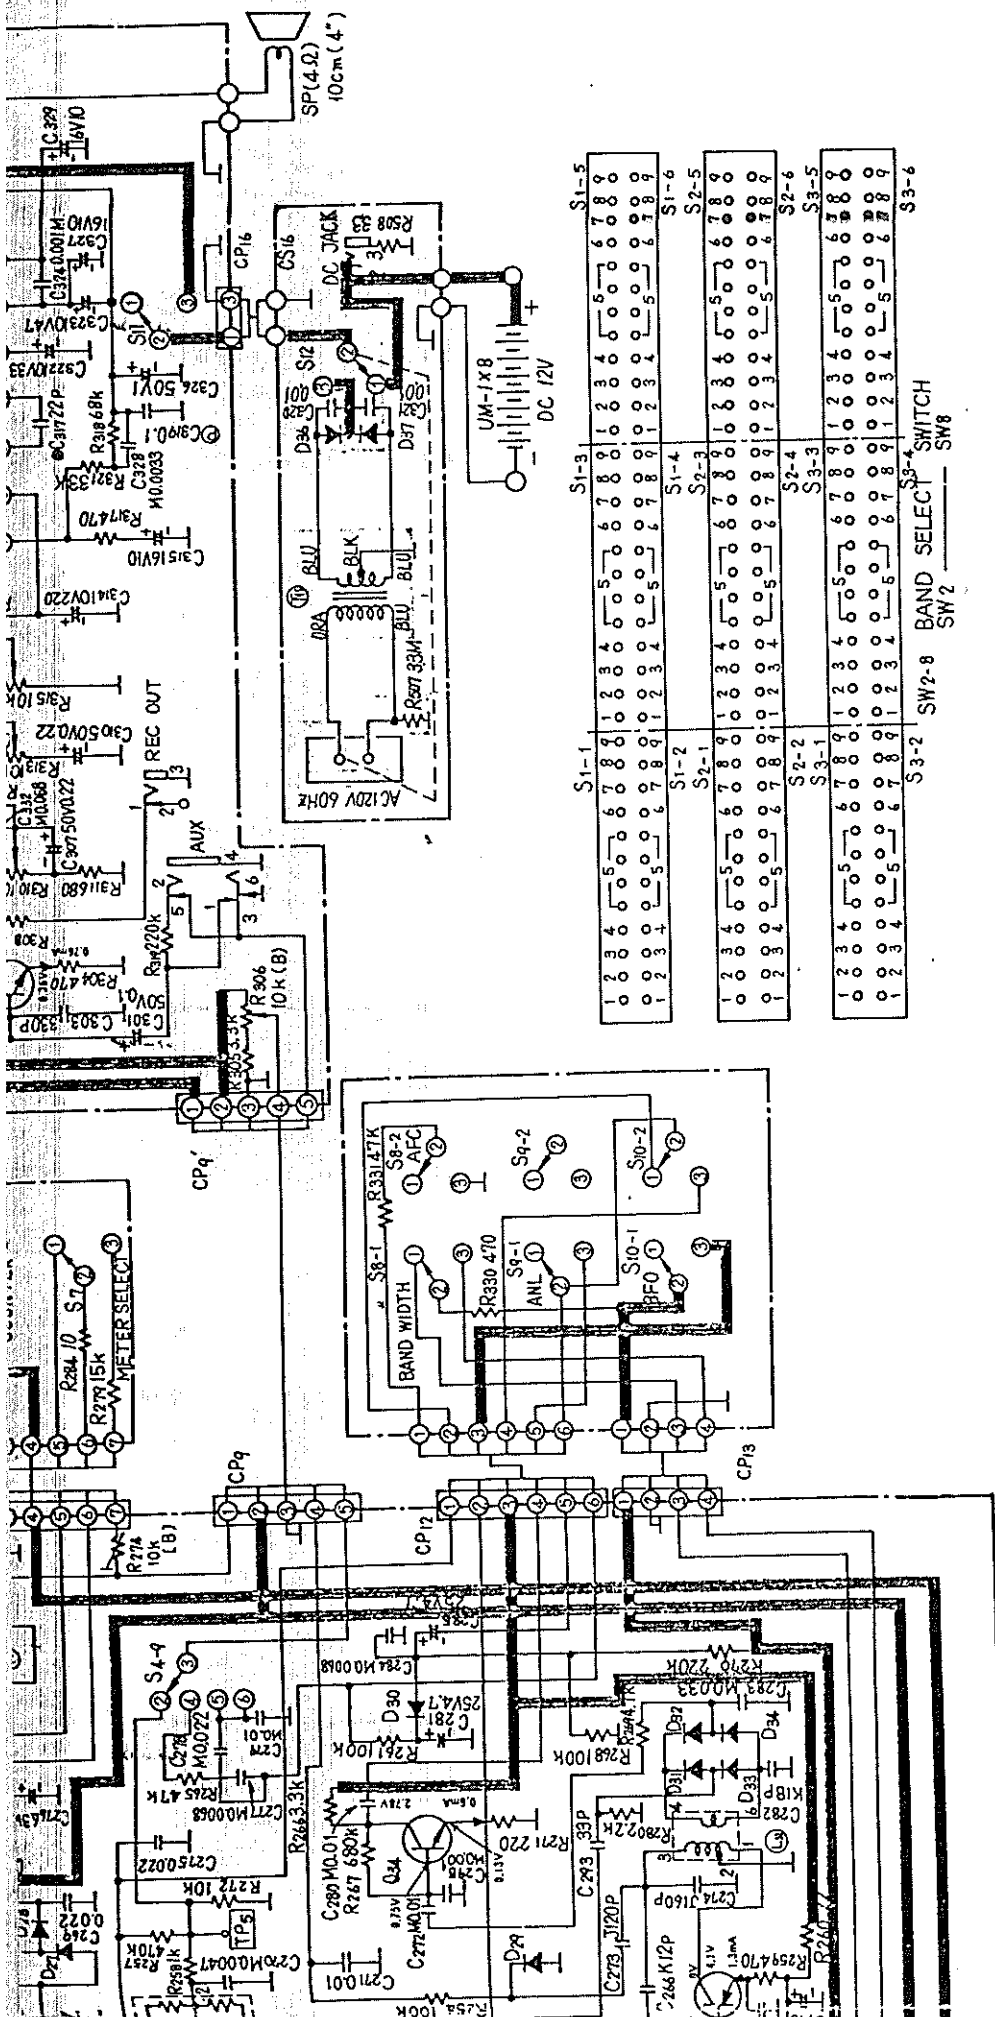

NOTICE

SCHEMATIC DIAGRAM
FEATURES IMPORTANT
ESSENTIAL THAT ONLY
PARTS BE USED FOR
ITS IN THE SHADED

D1,2	OA90	SW AGC
D3~5	MA150	SWITCHING
D6	RVDEQA0106RF	ZENER
D7	RVDDVD1261L	AOC
D8,3	RVDDVD1262L	AOC
D10	RVDS113	COUNT ADJUST
D11,12	OA90	AM AGC
D13	RVDS113	FM AFC

D14,15	MA150	SWITCHING
D16	OA90	FM AGC
D17~20	MA150	SWITCHING
D21,22	2-OA90	FM DET
D23~26	OA90	AM METER RECT
D28	RVDDVD1160L	AOC
D27,28	OA90	FM METER RECT
D29	RVDS113	BFO DET

D30	MA150	ANL
D31~34	2-OA90	BFO DET
D35	RVDMZ206	Zener
D36,37	RVD10E1LF	RECT
D38	RVDS113	SWITCHING
D39	RVDDVD1261M	AOC
D40,41	RVD10E1LF	RECT

